



- | | |
|--|----------|
| 1. Parking light | 4W |
| 2. High beam | 45W |
| 3. Low beam | 40W |
| 4. Connector, AMP | 3-way |
| 5. Connector, Molex | 4-way |
| 6. Connector 5-way | |
| 7. Connector | 2-way |
| 8. Ignition switch | |
| 9. Tachometer | 3W |
| 10. Speedometer | 3W |
| 11. L/H turn signal indicator | .2W |
| 12. Lights indicator | .2W |
| 13. High beam indicator | 2W |
| 14. Brake fluid warning light | 1.2W |
| 15. Oil pressure warning light | 1.2W |
| 16. Generator warning light | 1.2W |
| 17. Neutral indicator | 1.2W |
| 18. R/H turn signal indicator | 1.2W |
| 19. R/H front direction indicator | 21W |
| 20. L/H front direction indicator | 21W |
| 21. R/H rear direction indicator | 21W |
| 22. L/H rear direction indicator | 21W |
| 23. Engine start switch | |
| 24. Device - Lights control switch and direction indicators. | |
| 25. Horn | |
| 26. Front brake stop switch. | |
| 27. Rear brake stop switch. | |
| 28. High beam flash relay | |
| 29. Rectifier. | |
| 30. Alternator | 14V20A21 |
| 31. Regulator. | |
| 32. Battery. | |
| 33. Starter solenoid. | |
| 34. Starter motor. | |
| 35. Fuse holder. | |
| 36. Tail light. | |
| 37. Rear stop light. | |
| 38. Rear parking and number, plate light. | |
| 39. Connector | 3-way |
| 40. Flasher | |
| 41. Brake fluid level switch | |
| 42. Neutral position switch | |
| 43. Oil pressure switch | |
| 44. Coils. | |
| 45. Spark plugs. | |
| 48. Distributor | |