


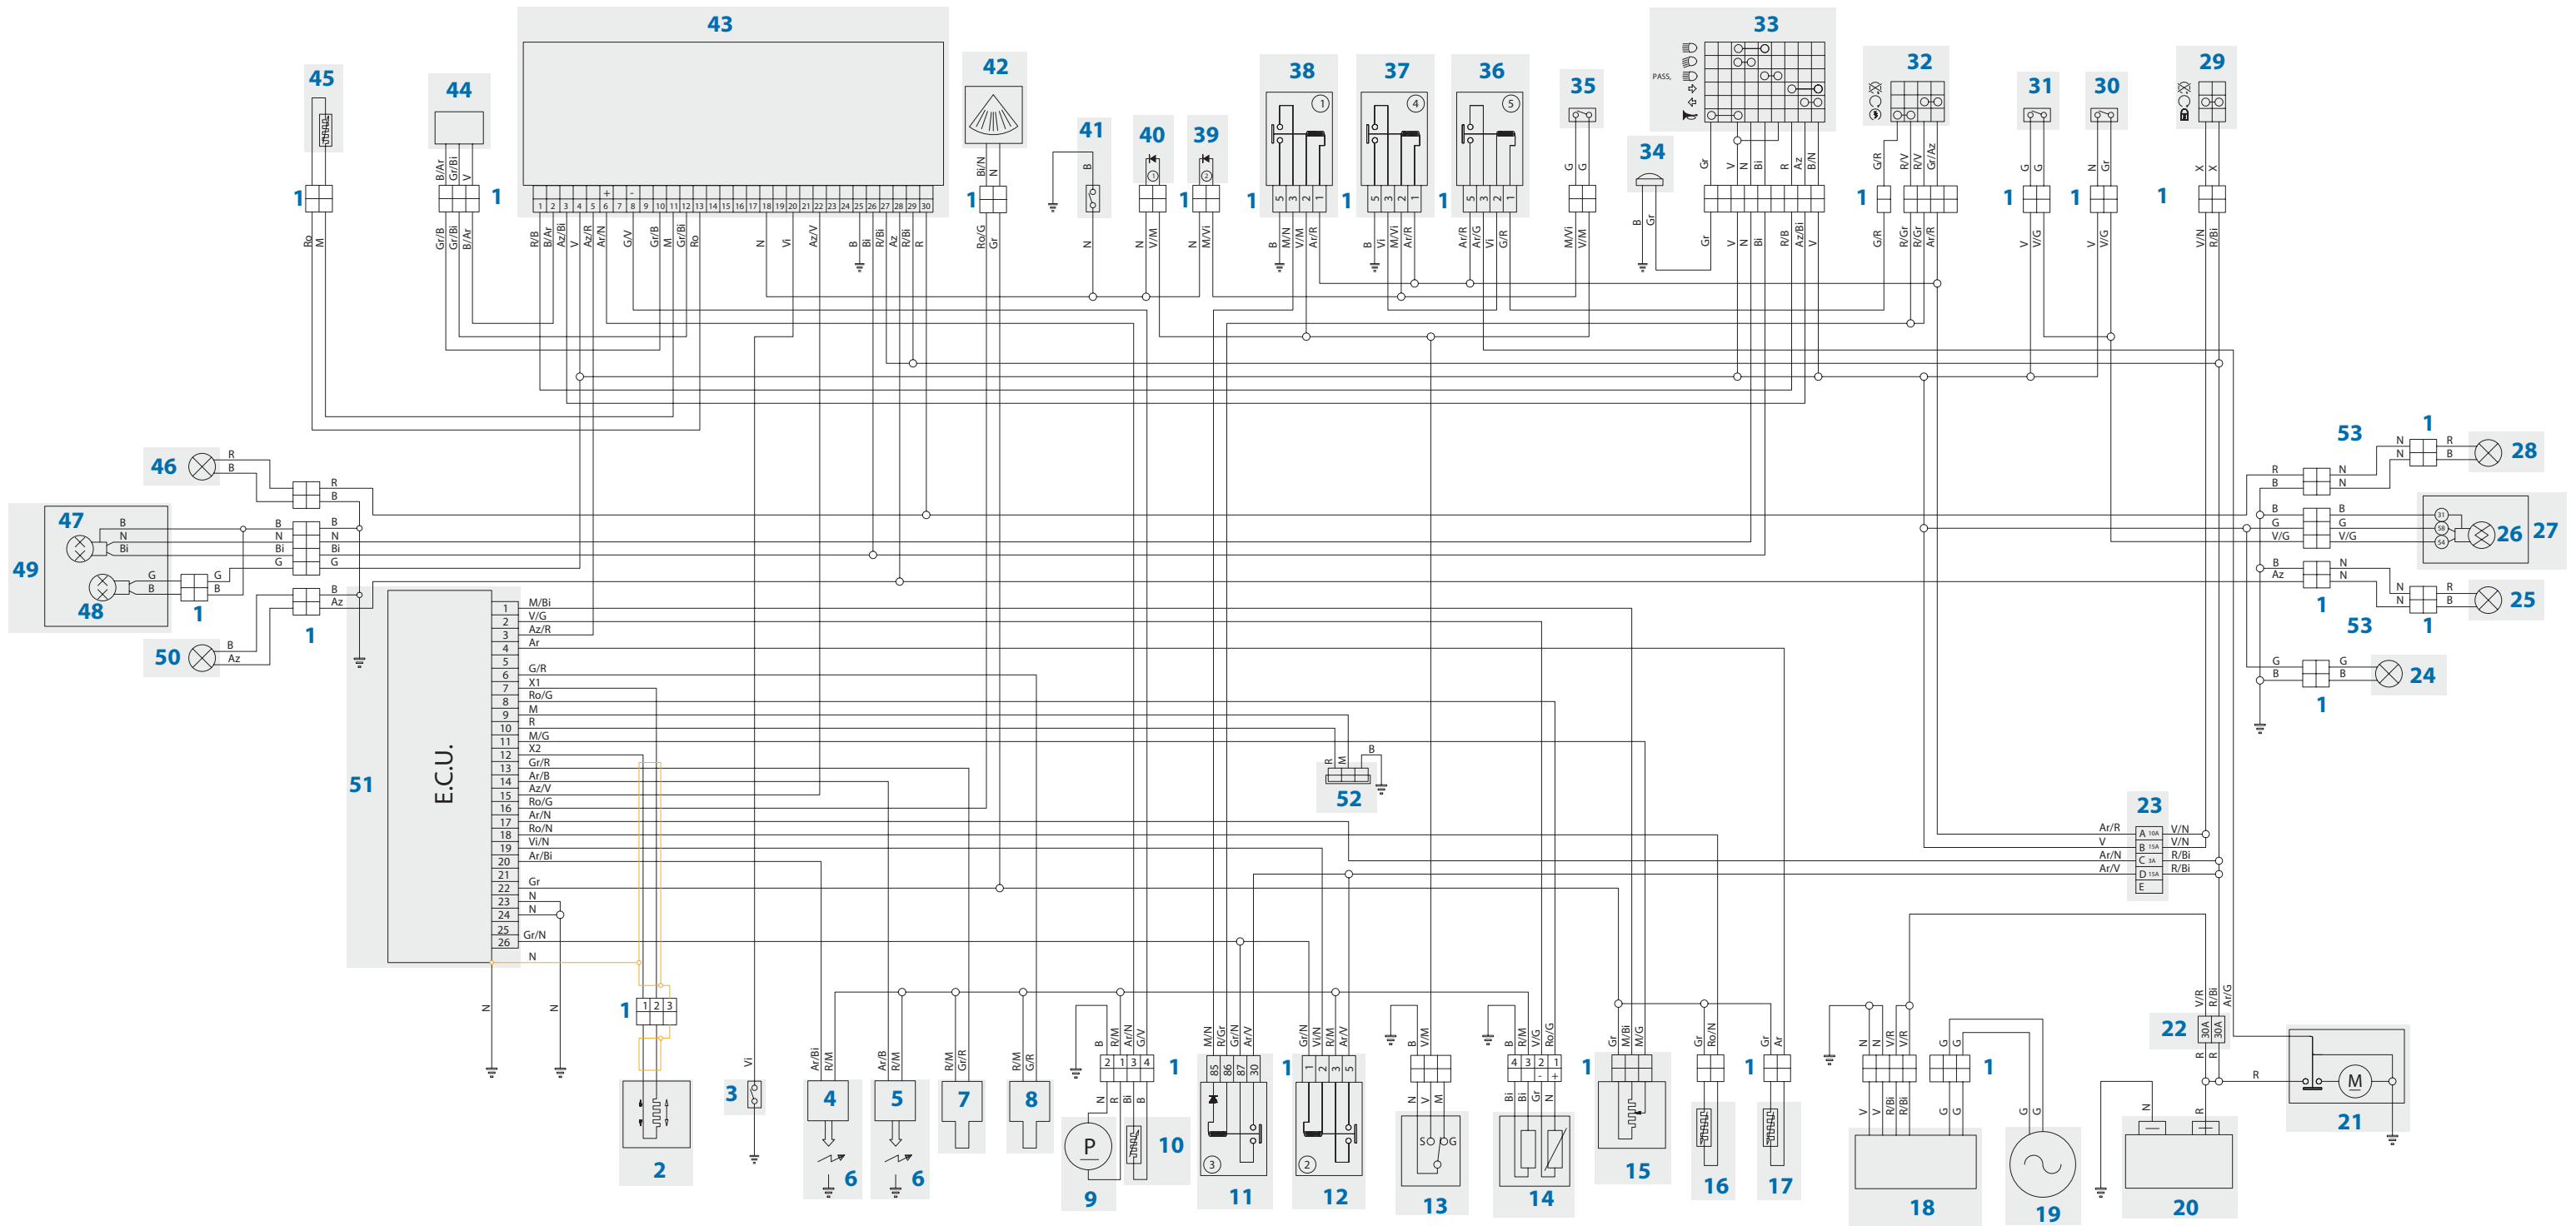

WIRING DIAGRAM
WIRING DIAGRAM KEY - Breva 750

- 1 Multiple connectors
- 2 Rpm sensor
- 3 Oil pressure sensor
- 4 Left-hand coil
- 5 Right-hand coil
- 6 Spark plugs
- 7 Left-hand injector
- 8 Right-hand injector
- 9 Fuel pump
- 10 Low fuel sensor
- 11 Main injection relay (with diode)
- 12 Secondary injection relay
- 13 Side stand switch
- 14 Lambda probe
- 15 Throttle sensor
- 16 Engine air thermistor
- 17 Cylinder head temperature sensor
- 18 Voltage regulator
- 19 Generator
- 20 Battery
- 21 Starter motor
- 22 Main fuses
- 23 Secondary fuses
- 24 Number plate light
- 25 Rear left direction indicator
- 26 Parking – brake lamp
- 27 Tail light
- 28 Rear right direction indicator
- 29 Key switch
- 30 Front brake light switch
- 31 Rear brake light switch
- 32 Right-hand selector switch
- 33 Left-hand selector switch
- 34 Horn
- 35 Clutch switch
- 36 Start relay
- 37 B safety logic relay
- 38 A safety logic relay
- 39 Diode 1
- 40 Diode 2
- 41 Neutral switch
- 42 Bank angle sensor
- 43 Dashboard
- 44 Speed sensor
- 45 Dashboard air temperature thermistor
- 46 Front right direction indicator
- 47 High beam / low beam lamp
- 48 Front parking light lamp
- 49 Headlight
- 50 Front left direction indicator

- 51 Engine control unit
- 52 Tester socket
- 53 Extension (for saddle bags kit only)

SECONDARY FUSES:

- 10-A fuse
 - A- Safety logic / starting
- 15-A fuse
 - B- Brake, parking and high lights, horn
- 3-A fuse
 - C- Injection permanent supply
- 15-A fuse
 - E- Injection
- - D- Free

CABLE COLOURS:

- Ar Orange
- Az Light blue
- B Blue
- Bi White
- G Yellow
- Gr Grey
- M Brown
- N Black
- R Red
- V Pink
- Vi Green
- Ro Violet

