



- KEY**
- 01 MULTIPLE CONNECTORS
  - 02 REVOLUTION SENSOR
  - 03 LOW OIL SENSOR
  - 04 LEFT CYLINDER COIL
  - 05 RIGHT CYLINDER COIL
  - 06 SPARK PLUGS
  - 07 LEFT CYLINDER INJECTOR
  - 08 RIGHT CYLINDER INJECTOR
  - 09 FUEL PUMP
  - 10 FUEL RESERVE SENSOR
  - 11 MAIN INJECTION RELAY (POLARISED)
  - 12 SECONDARY INJECTION RELAY
  - 13 SIDE STAND SWITCH
  - 14 LAMBDA PROBE
  - 15 THROTTLE POSITION SENSOR
  - 16 INTAKE AIR TEMPERATURE SENSOR
  - 17 ENGINE TEMPERATURE SENSOR
  - 18 VOLTAGE REGULATOR
  - 19 PICK UP
  - 20 BATTERY
  - 21 STARTER MOTOR
  - 22 MAIN FUSES
  - 23 SECONDARY FUSES
  - 24
  - 25 REAR LEFT TURN INDICATOR
  - 26 TWIN-FILAMENT REAR / STOP BULB
  - 27 REAR LIGHT ASSEMBLY
  - 28 REAR RIGHT TURN INDICATOR
  - 29 KEY SWITCH
  - 30 FRONT STOP SWITCH
  - 31 REAR STOP SWITCH
  - 32 RIGHT LIGHT SWITCH
  - 33 LEFT LIGHT SWITCH
  - 34 HORN
  - 35 CLUTCH SWITCH
  - 36 START-UP RELAY
  - 37 LIGHT LOGIC RELAY
  - 38 -
  - 39 -
  - 40 DIODE
  - 41 GEAR IN NEUTRAL SWITCH
  - 42 FALL SENSOR
  - 43 INSTRUMENT PANEL
  - 44 VEHICLE SPEED SENSOR
  - 45 AIR TEMPERATURE SENSOR
  - 46 FRONT RIGHT TURN INDICATOR
  - 47 LOW-BEAM/HIGH-BEAM BULB
  - 48 TAIL LIGHT BULB
  - 49 HEAD LIGHT ASSEMBLY
  - 50 FRONT LEFT TURN INDICATOR
  - 51 ECU
  - 52 INSTRUMENT PANEL DIAGNOSIS

- COLOUR KEY**
- Ar Orange
  - Az Sky blue
  - B Blue
  - Bi White
  - C Yellow
  - Gr Grey
  - M Brown
  - N Black
  - R Red
  - Ro Pink
  - V Green
  - Vi Purple

- DIAGRAM COLOURS - KEY**
- POWER SUPPLY
  - GROUND
  - ENABLING / SIGNAL
  - ENABLING / SIGNAL

