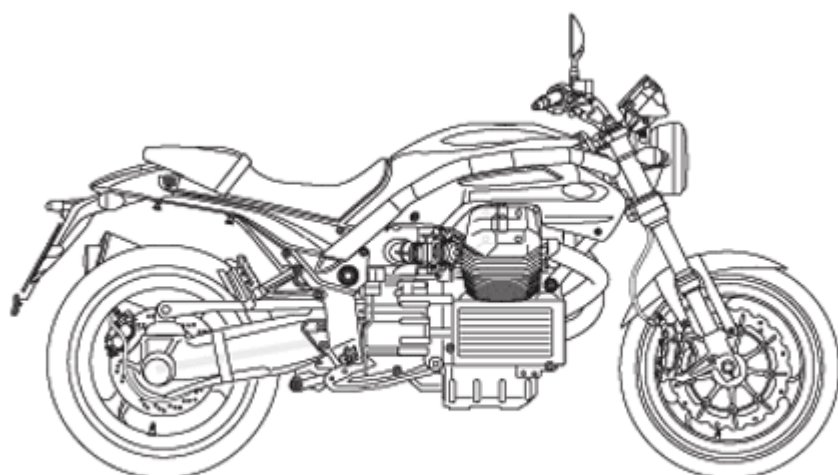




GRISO V 8V 1200 2007	GU088	00	TAB N.
FRAME			

01

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Frame	-	-	-	-	GU06400100	1	BA009
2	Hex socket screw M12x50	-	-	-	-	GU98682650	2	-
3	Washer 13x18x1,7	-	-	-	-	GU30217900	2	-
4	RH plate	-	-	-	-	GU05425530	1	BG079
5	Screw w/ flange M8x30*	-	-	-	-	AP8152288	2	-
6	Pin M12	-	-	-	-	AP8221160	1	BA329
7	Washer 13x24x2,5	-	-	-	-	GU95008313	4	-
8	Low self-locking nut M12*	-	-	-	-	AP8150432	2	-
9	Pin M12	-	-	-	-	AP8221307	1	BA329
10	Rubber spacer	-	-	-	-	AP8220238	2	-
11	Rubber spacer	-	-	-	-	AP8220162	4	-
12	Clip M6	-	-	-	-	GU28576591	8	-
13	Clip M5	-	-	-	-	AP8102375	8	-
14	Gasket	-	-	-	-	GU06409800	3	-
15	Protection	-	-	-	-	GU06461300	1	-
16	Guard decal	-	-	-	-	977050	2	-

GRISO V 8V 1200 2007	GU088	00	TAB N.
LATERAL STAND			

02

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Lateral stand	-	-	-	-	977067	1	BG04
2	Lever	-	-	-	-	GU06431900	1	BG10
3	Gasket	-	-	-	-	GU06431700	1	-
4	T bush *	-	-	-	-	AP8121795	2	-
5	Hex socket screw M6x16	-	-	-	-	GU98682316	2	-
6	Stand plate	-	-	-	-	977065	1	BG11
7	Coil pull spring *	-	-	-	-	AP8121014	1	BG02
8	Lateral stand spring	-	-	-	-	AP8221197	1	BG02
9	Stand spring protection	-	-	-	-	AP8102524	1	-
10	Screw w/ flange M10x25	-	-	-	-	AP8152473	1	-
11	Screw w/ flange M8x25*	-	-	-	-	AP8152287	2	-
12	Central stand fixing screw	-	-	-	-	AP8121607	1	BG01
13	Curved spring washer *	-	-	-	-	AP8150292	1	-
14	Low nut M10x1,25*	-	-	-	-	AP8152001	1	-
15	Lateral stand switch	-	-	-	-	639542	1	CD14
16	Hex socket screw M5x20	-	-	-	-	GU98612220	2	-
17	Self-locking nut M5*	-	-	-	-	AP8152306	1	-
18	Thermal sheath	-	-	-	-	GU00823923140	1	-
19	Fairlead	-	-	-	-	GU06765500	1	-
20	Cable-guide	-	-	-	-	AP8121882	1	-

GRISO V 8V 1200 2007	GU088	00	TAB N.
FOOT RESTS I			

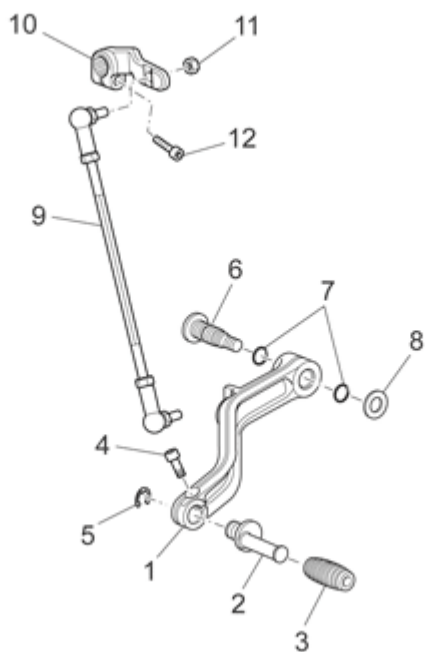
03

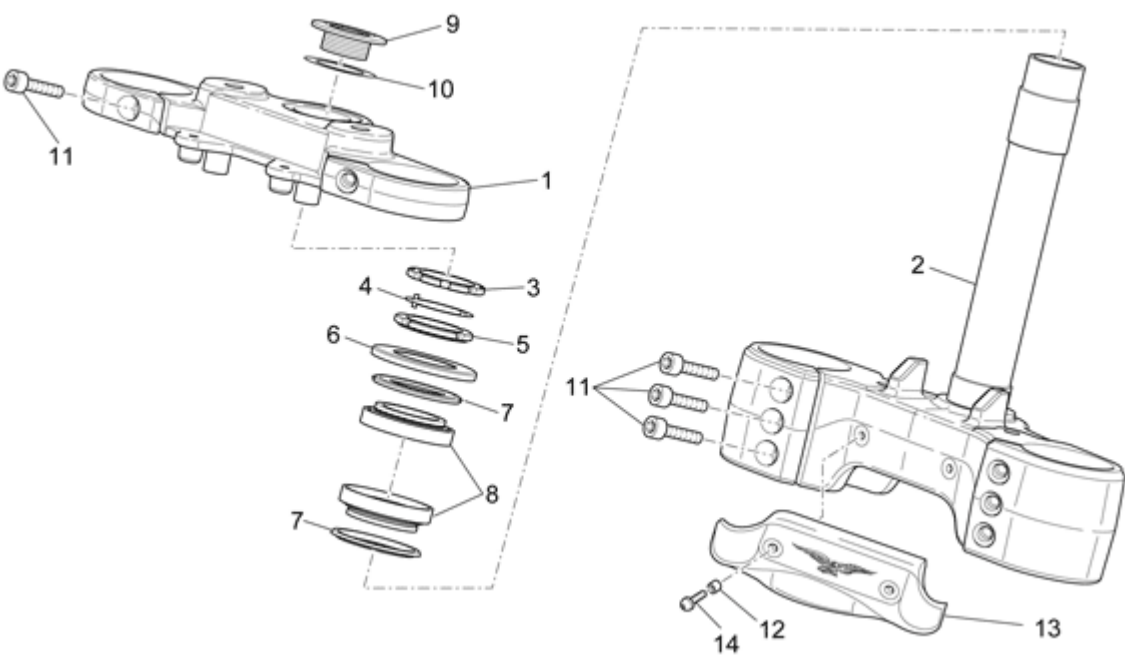
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Pin	-	-	-	-	AP8121567	4	-
2	Stop ring	-	-	-	-	AP8152409	4	-
3	RH Foot rests	-	-	-	-	977822	1	BA05A
4	Pin	-	-	-	-	GU30441005	2	-
5	LH Foot rests	-	-	-	-	977823	1	BA05B
6	Footrest return spring	-	-	-	-	AP8221277	2	BA08*
7	Footrest plate	-	-	-	-	AP8134451	4	-
8	Rear footrest, RH	-	-	-	-	977824	1	BA15A
9	Coil compress. spring *	-	-	-	-	AP8121133	2	-
10	Ball D6,35	-	-	-	-	AP8101861	2	-
11	Rear footrest, LH	-	-	-	-	977825	1	BA15B

GRISO V 8V 1200 2007	GU088	00	TAB N.
FOOT RESTS II			

04

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	LH plate	-	-	-	-	977053	1	BA17A
2	Screw M8x75	-	-	-	-	GU98700475	4	-
3	Spacer 8,2x14x49,5	-	-	-	-	AP8121805	4	-
4	Self-locking nut M8*	-	-	-	-	AP8152300	6	-
5	Screw M8x30	-	-	-	-	GU98700430	4	-
6	RH plate	-	-	-	-	977052	1	BA17B
7	RH protection	-	-	-	-	GU06445900	1	DF23A
8	Screw M5x15	-	-	-	-	GU98710215	4	-
9	LH protection	-	-	-	-	GU06445901	1	DF23B
10	LH footrest support	-	-	-	-	GU06446000	1	BA16B
11	LH protection	-	-	-	-	GU06447501	1	DF23B
12	Ring	-	-	-	-	GU05446431	2	-
13	Hex socket screw M5X10	-	-	-	-	GU98350210	6	-
14	RH foot rest support	-	-	-	-	GU06443500	1	BA16A
15	Screw M10x30	-	-	-	-	GU98700530	4	-
16	RH protection	-	-	-	-	GU06447500	1	DF23A
17	Hex socket screw M4x12	-	-	-	-	GU98370412	4	-
18	Cable-guide	-	-	-	-	AP8120428	1	-

		GRISO V 8V 1200 2007		GU088	00	TAB N.	05	
		GEAR LEVER						
								
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Gear lever	-	-	-	-	GU06250900	1	BA109
2	Brake lever pin	-	-	-	-	AP8121221	1	-
3	Lever rubber	-	-	-	-	AP8120912	1	BA149
4	Hex socket screw M6x16	-	-	-	-	GU98682316	1	-
5	Circlip d9	-	-	-	-	AP8150462	1	-
6	Rear brake lever pin	-	-	-	-	AP8121223	1	-
7	O-ring 11,11x1,78	-	-	-	-	AP8144007	2	-
8	Washer 10,2X18X2	-	-	-	-	GU95008210	1	-
9	Change gear tie rod compl.	-	-	-	-	GU06257800	1	BA129
10	Lever	-	-	-	-	GU05256930	1	BA119
11	Nut M6X1	-	-	-	-	GU92630707	2	-
12	Hex socket screw M6x20	-	-	-	-	GU98682320	1	-

		GRISO V 8V 1200 2007		GU088		00		TAB N.		06	
STEERING											
											
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.			
1	Fork upper plate	-	-	-	-	GU06493100	1	BD119			
2	Stem base	-	-	-	-	GU06494000	1	BD019			
3	Return ring nut	-	-	-	-	AP8123643	1	BA049			
4	Steering security plate	-	-	-	-	AP8121207	1	-			
5	Ring nut	-	-	-	-	AP8123642	1	BA049			
6	Dust cover ring	-	-	-	-	AP8123644	1	BA379			
7	Dust cover ring	-	-	-	-	AP8123641	2	BA379			
8	Axial ball bearing	-	-	-	-	AP8110077	2	BA039			
9	Upper plate fixing bush	-	-	-	-	AP8121346	1	-			
10	Stem plug washer	-	-	-	-	AP8152384	1	-			
11	Screw M8x30	-	-	-	-	GU98700430	8	-			
12	Bush 5,3x8x7,1	-	-	-	-	AP8221036	2	-			
13	Brake hose fixing plate	-	-	-	-	GU05658431	1	BD329			
14	Screw w/ flange M5x16	-	-	-	-	AP8152298	2	-			

GRISO V 8V 1200 2007	GU088	00	TAB N.
FRONT FORK			

07

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	RH radial sleeve	-	-	-	-	978160	1	BD09A
2	LH radial sleeve	-	-	-	-	978159	1	BD09B
3	Sleeve	-	-	-	-	978487	2	BD09*
4	Plunger attachment bush	-	-	-	-	AP8123810	2	-
5	Spring	-	-	-	-	AP8163495	2	BD07*
6	Preload tube cpl.	-	-	-	-	AP8123832	2	BD33*
7	Spacer	-	-	-	-	AP8123835	2	-
8	Washer	-	-	-	-	AP8123836	2	-
9	Plunger, complete	-	-	-	-	AP8163496	2	BD069
10	Washer	-	-	-	-	AP8123816	2	-
11	Ring	-	-	-	-	AP8123815	2	-
12	Sleeve plug cpl.	-	-	-	-	AP8123817	2	BD15*
13	O-ring	-	-	-	-	AP8123834	2	BD15*
14	O-ring	-	-	-	-	AP8123819	2	BD15*
15	O-ring	-	-	-	-	AP8123820	2	BD15*
16	Stop ring	-	-	-	-	AP8123821	2	BD15*
17	Screw w/ flange M8x40*	-	-	-	-	AP8152290	4	-
18	Hub+RH fork leg	-	-	-	-	978456	1	BD03A
19	Hub+LH fork leg	-	-	-	-	978455	1	BD03A
20	Dust cover	-	-	-	-	AP8123824	2	BD05*
21	Circlip	-	-	-	-	981013	2	-
22	Oil seal	-	-	-	-	AP8123825	2	BD04*
23	Ring	-	-	-	-	981012	2	-
24	Bush	-	-	-	-	AP8123827	2	BD10*
25	Bush	-	-	-	-	AP8123828	2	BD10*
26	Special washer	-	-	-	-	AP8123811	2	-
27	Screw M10x1,5	-	-	-	-	AP8123812	2	-



GRISO V 8V 1200 2007

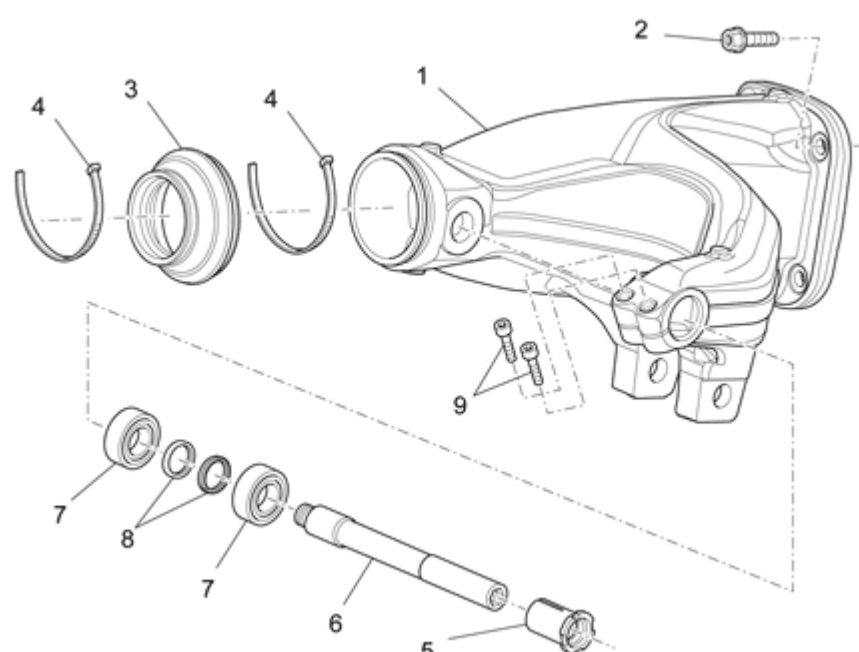
GU088

00

TAB N.

08

SWING ARM



Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Swing arm, black	-	-	-	-	978350	1	BE009
2	Screw w/ flange M10x35	-	-	-	-	AP8152318	4	-
3	Rubber bellows	-	-	-	-	GU05548030	1	AH289
4	Hose clamp 3,6x375	-	-	-	-	GU93304390	2	-
5	Bush	-	-	-	-	GU05547130	1	BE079
6	Pin	-	-	-	-	GU05547030	1	BE019
7	Roller bearing 25x47x17	-	-	-	-	GU92249224	2	BE069
8	Gasket ring	-	-	-	-	GU05547930	2	-
9	Hex socket screw M6x25	-	-	-	-	GU98682325	2	-

GRISO V 8V 1200 2007

GU088

00

TAB N.

09

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Transmission complete black	-	-	-	-	976570	1	AG219
2	Reaction rod assy.	-	-	-	-	978347	1	AG239
3	Screw w/ flange M10x55	-	-	-	-	AP8152410	2	AG379
4	Spacer 10,2x20x4	-	-	-	-	AP8121218	3	-
5	Nut M10	-	-	-	-	AP8152242	2	-
6	Drive shaft	-	-	-	-	GU05326330	1	AG199

GRISO V 8V 1200 2007	GU088	00	TAB N.
TRANS.CPL.-CAGE			

10

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Upper dust cover	-	-	-	-	GU05358330	1	AG399
2	Oil plug M12x1,5	-	-	-	-	GU05351230	1	AH119
3	Washer	-	-	-	-	GU90718120	1	-
4	Pin 6x20	-	-	-	-	GU95510620	2	-
5	Hose clamp	-	-	-	-	GU05358130	2	-
6	Upper dust cover	-	-	-	-	GU05358030	1	AG399
7	Hose clamp	-	-	-	-	GU05358230	1	-
8	Gasket 10x18x1,5	-	-	-	-	GU01528930	1	-
9	Oil unload plug M10X1	-	-	-	-	GU31003766	1	-
10	Gasket ring 85x110x8BASL	-	-	-	-	GU90408511	1	AO369
11	Hex socket screw M8x50	-	-	-	-	GU98680450	11	-
12	Breather plug	-	-	-	-	GU05206530	1	-
13	Gasket 10x18x1,5	-	-	-	-	GU01528930	1	-
14	Screw M3,9x6,5	-	-	-	-	GU99210406	2	-
15	Ring	-	-	-	-	GU05358530	1	-
16	Gasket	-	-	-	-	GU05358630	1	AO439

GRISO V 8V 1200 2007

GU088

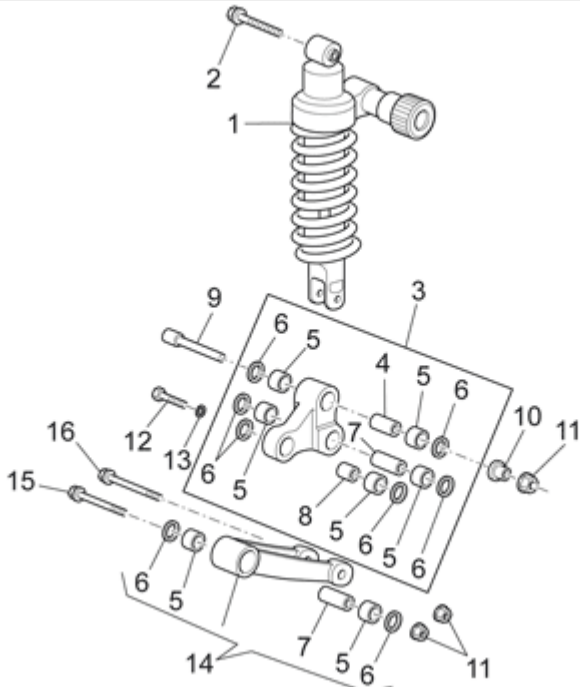
00

TAB N.

11

TRANS.CPL.-BEVEL GEAR

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Bevel gear kit 12/44	-	-	-	-	976581	1	AG189
2	Ring nut	-	-	-	-	GU05352430	1	-
3	Gasket ring 45x58x7	-	-	-	-	GU90404558	1	AO389
4	Ball bearing 85x120x18	-	-	-	-	GU92208518	1	AI269
5	Ball bearing 30x62x16	-	-	-	-	GU92204230	1	AI269
6	Bush	-	-	-	-	AP8121098	2	AG379
7	Gasket ring	-	-	-	-	AP8120485	2	AG379
8	Circlip	-	-	-	-	GU90273026	2	AG379
9	Ball joint	-	-	-	-	GU05638130	1	AG379

		GRISO V 8V 1200 2007		GU088		00		TAB N.		12	
CONNECTING ROD - REAR SHOCK ABS.											
											
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.			
1	Shock absorber	-	-	-	-	GU06550200	1	BF009			
2	Screw w/ flange M10x80	-	-	-	-	AP8152398	1	-			
3	Double conrod	-	-	-	-	GU05560330	1	BF099			
4	Double connecting rod pin L40	-	-	-	-	AP8135924	1	BF109			
5	Needle bearing	-	-	-	-	AP8110066	7	BF119			
6	Oil seal D18x24x3	-	-	-	-	AP8110068	8	-			
7	Double connecting rod pin L47	-	-	-	-	GU05562030	2	BF109			
8	Double connecting rod pin L25	-	-	-	-	AP8135608	1	BF109			
9	Hex socket screw M10x82	-	-	-	-	AP8152397	1	-			
10	T bush *	-	-	-	-	AP8121155	1	-			
11	Self-locking nut M10*	-	-	-	-	AP8152301	3	-			
12	Hex screw M10x47	-	-	-	-	AP8152147	1	BF029			
13	Curved spring washer *	-	-	-	-	AP8150292	1	-			
14	Single conrod comp.	-	-	-	-	GU05562430	1	BF089			
15	Screw w/ flange M10x85	-	-	-	-	AP8152482	1	-			
16	Screw w/ flange M10x95	-	-	-	-	AP8152396	1	-			

GRISO V 8V 1200 2007

GU088

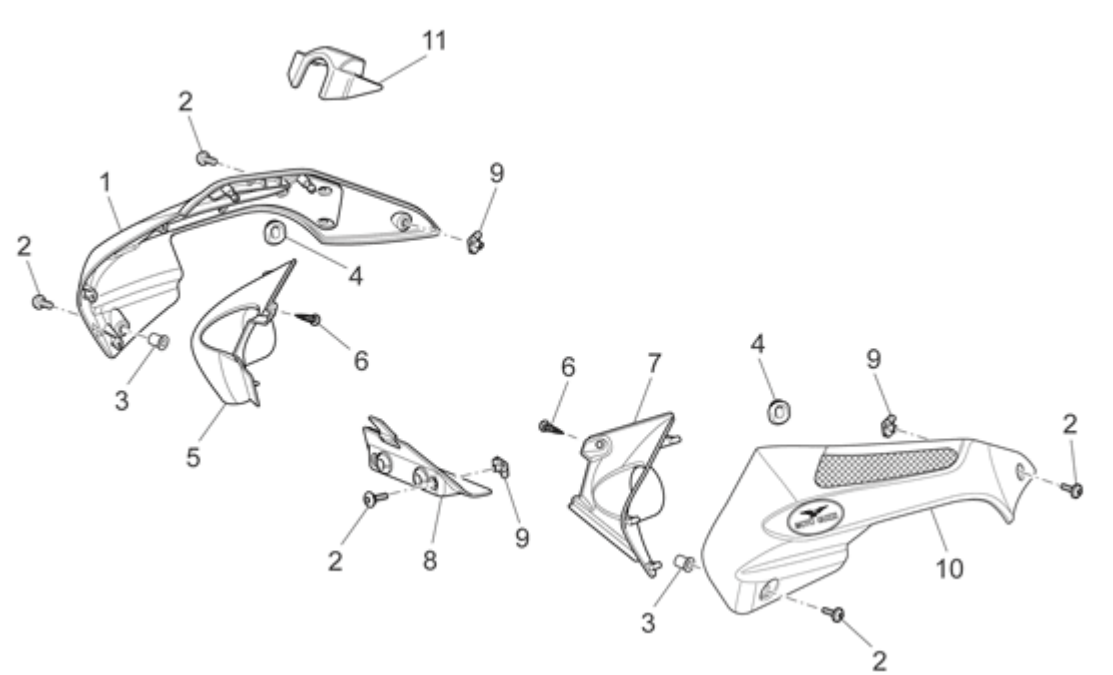
00

TAB N.

13

FUEL TANK

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Fuel tank, white	-	-	-	-	d/wh GU06100200000BM	1	DA009
	Fuel tank, red	-	-	-	-	r/red GU0610020000Y01	1	DA009
	Fuel tank, black	-	-	-	-	g/bl GU0610020000Y02	1	DA009
	Fuel tank blank	-	-	-	-	gr GU06100200	1	DA009
2	Plug ring nut	-	-	-	-	GU06102300	1	DA179
3	Screw M5x15	-	-	-	-	GU98710215	8	-
4	Tank cap	-	-	-	-	GU06103900	1	DA029
5	Hex socket screw M5x16	-	-	-	-	GU98692216	4	-
6	Hex socket screw M6X40	-	-	-	-	GU98680340	2	-
7	Fuel tank bush	-	-	-	-	GU06107100	2	-
8	Rubber spacer	-	-	-	-	AP8144328	2	-
9	T bush *	-	-	-	-	AP8121075	2	-
10	Screw w/ flange M6X25	-	-	-	-	AP8152280	2	-
11	T bush *	-	-	-	-	GU06704901	2	-
12	Silent-block	-	-	-	-	GU93222023	2	-
13	Union	-	-	-	-	GU30103730	2	DA409
14	O-ring 2018	-	-	-	-	AP8120965	2	-
15	Fuel pipe 4x8	-	-	-	-	AP822263	3	DA399
16	3-way union	-	-	-	-	AP8104666	1	DA319
17	O-ring 164,69X3,53	-	-	-	-	977062	1	-

		GRISO V 8V 1200 2007		GU088	00	TAB N.	14		
		FRONT BODY - DUCT							
									
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.	
1	RH air duct, black	-	-	-	-	g/bl 97840400Y02	1	DF25A	
	RH air duct, red	-	-	-	-	r/red 97840400Y01	1	DF25A	
	RH air duct, white	-	-	-	-	d/wh 97840400BM	1	DF25A	
2	Screw w/ flange M5x12	-	-	-	-	- AP8152302	8	-	
3	Antivibration bush	-	-	-	-	- GU93231605	2	-	
4	Rubber spacer	-	-	-	-	- AP8220162	4	-	
5	RH Covers	-	-	-	-	- GU06576800	1	DF26A	
6	Self-tap screw 3,9x14	-	-	-	-	- AP8150413	6	-	
7	LH Covers	-	-	-	-	- GU06576900	1	DF26B	
8	Protection	-	-	-	-	- GU06729800	1	AM109	
9	Clip M5	-	-	-	-	- AP8102375	2	-	
10	LH air duct, black	-	-	-	-	g/bl 97840500Y02	1	DF25B	
	LH air duct, red	-	-	-	-	r/red 97840500Y01	1	DF25B	
	LH air duct, white	-	-	-	-	d/wh 97840500BM	1	DF25B	
11	Protection	-	-	-	-	- GU06783600	1	-	



GRISO V 8V 1200 2007

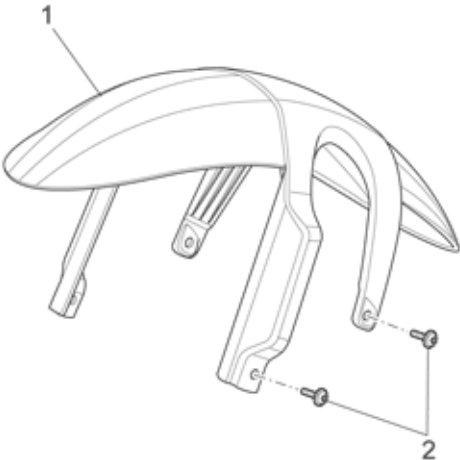
GU088

00

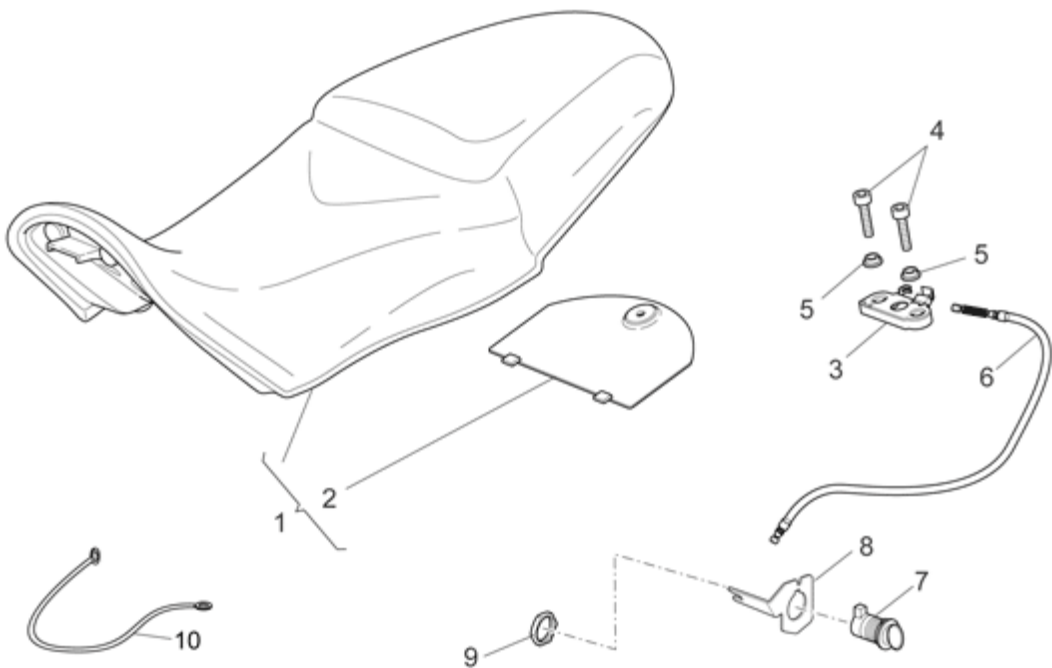
TAB N.

15

FRONT MUDGUARD



Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Front mudguard, red	-	-	-	-	r/red GU06434302	1	DF019
	Front mudguard, black	-	-	-	-	g/bl GU06434301	1	DF019
	Front mudguard, white	-	-	-	-	d/wh GU0643430000BM	1	DF019
	Front mudguard blank	-	-	-	-	- GU06434300	1	DF019
2	Screw w/ flange M5x9	-	-	-	-	- AP8152339	4	-

		GRISO V 8V 1200 2007		GU088	00	TAB N.	16		
		SADDLE							
									
Pos.	Description	Year	I_M_	Country	Version		Code	Q.ty	P.Cod.
1	Saddle	-	-	-	-	-	978239	1	DG009
2	Door	-	-	-	-	-	GU06479600	1	-
3	Pass.saddle connecting plate	-	-	-	-	-	AP8102913	1	DG019
4	Hex socket screw M6X25	-	-	-	-	-	GU98370625	2	-
5	Self-locking nut M6*	-	-	-	-	-	AP8152299	2	-
6	Saddle release cable	-	-	-	-	-	GU06462100	1	HA069
7	Saddle lock	-	-	-	-	-	GU05466830	1	DH039
8	Plate	-	-	-	-	-	AP8134948	1	-
9	Lock nut	-	-	-	-	-	AP8102523	1	-
10	Helmet lock cable	-	-	-	-	-	AP8102502	1	HA079

GRISO V 8V 1200 2007	GU088	00	TAB N.
REAR BODY - MUDGUARD			

17

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Splash guard	-	-	-	-	GU06438700	1	DF069
2	Clip M5	-	-	-	-	AP8102375	6	-
3	Stud bolt	-	-	-	-	GU06467300	4	-
4	Screw	-	-	-	-	GU98250835	4	-
5	Battery holder	-	-	-	-	GU06704800	1	DF149
6	Battery fixing plate	-	-	-	-	GU06418600	1	CC069
7	Screw TBCT M6X16	-	-	-	-	AP8150377	2	-
8	Union	-	-	-	-	GU06704700	1	-
9	Breather pipe 4x8	-	-	-	-	AP8220263	1	CC029
10	Number plate holder	-	-	-	-	GU06438600	1	DF059
11	Hex socket screw M5x22	-	-	-	-	GU98680222	6	-
12	T bush 6,5x8,6x9	-	-	-	-	AP8121929	6	-
13	Reflector support	-	-	-	-	AP8134448	1	CB21F
14	Hex socket screw M5x16*	-	-	-	-	AP8152268	2	-
15	Rear reflector, red	-	-	-	-	AP8224164	1	CB08F
16	Support	-	-	-	-	GU06439200	1	-
17	Self-tap screw 3,9x14	-	-	-	-	AP8150413	2	-
18	Self-tapping screw *	-	-	-	-	AP8150420	1	-
19	Self-locking nut M5*	-	-	-	-	AP8152306	1	-

GRISO V 8V 1200 2007

GU088

00

TAB N.

18

REAR BODY - REAR FAIRING

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Rear tail black	-	-	-	-	g/bl GU0657310000Y02	1	DF169
	Rear tail red	-	-	-	-	r/red GU0657310000Y01	1	DF169
	Rear fairing, white	-	-	-	-	d/wh GU0657310000BM	1	DF169
2	Screw w/ flange M5x12	-	-	-	-	AP8152302	8	-
3	Clip M5	-	-	-	-	AP8102375	6	-
4	Covers	-	-	-	-	GU06573300	1	DF209
5	T bush 6,5x8,6x9	-	-	-	-	AP8121929	2	-
6	Spacer	-	-	-	-	GU06469200	2	-
7	Vibration-damping rubber	-	-	-	-	GU06741200	1	-

GRISO V 8V 1200 2007

GU088

00

TAB N.

19

DASHBOARD

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Dashboard complete	-	-	-	-	GU06760000	1	JA009
2	Instrum.frame, chrom.	-	-	-	-	GU06765100	1	JB029
3	Spec. self-tap screw 3,5x20	-	-	-	-	AP8221242	7	-
4	Socket support	-	-	-	-	GU06764000	1	JB099
5	Screw w/ flange M6X16	-	-	-	-	GU98210616	4	-
6	T bush *	-	-	-	-	AP8121795	4	-
7	Silent-block	-	-	-	-	GU93222023	2	-
8	Rubber spacer *	-	-	-	-	AP8220228	2	-
9	Self-tap screw 5x14	-	-	-	-	AP8150509	3	-
10	Lower dash.cover, chr.	-	-	-	-	GU06765200	1	JB119
11	Air temp. Sensor	-	-	-	-	AP8124936	1	AN059
12	Washer for shafts	-	-	-	-	GU90274002	2	-
13	Main switch - steering lock	-	-	-	-	GU06782500	1	DH029
14	Screw	-	-	-	-	GU97260435	2	-
15	Speedometer sensor cpl.	-	-	-	-	GU06765400	1	CA209
16	Hex socket screw M4x10	-	-	-	-	AP8152043	2	-
17	Fairlead	-	-	-	-	GU06765500	1	-
18	Cable-guide	-	-	-	-	AP8121882	1	-

GRISO V 8V 1200 2007	GU088	00	TAB N.	20
----------------------	-------	----	--------	----

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Handlebar	-	-	-	-	978204	1	
2	Upper U-bolt	-	-	-	-	GU06500600	2	
3	Screw M8x30	-	-	-	-	GU98700430	4	
4	Lower U-bolt	-	-	-	-	GU06500200	2	
5	Screw w/ flange M10x40*	-	-	-	-	AP8152325	2	
6	LH lights selector	-	-	-	-	AP8127703	1	
7	LH hand grip	-	-	-	-	AP8118579	1	
8	Anti.v weight, chr.	-	-	-	-	GU32602860	2	
9	Hex socket screw M6x40	-	-	-	-	GU98600340	2	
10	Anti vib.weight trailing	-	-	-	-	AP8121520	2	
11	Throttle cpl.	-	-	-	-	GU05603331	1	
12	RH hand grip	-	-	-	-	GU01603480	1	
13	Front gas lever U-bolt	-	-	-	-	AP8118502	1	
14	Cap screw	-	-	-	-	AP8118492	2	
15	Rear gas lever U-bolt	-	-	-	-	AP8118503	1	
16	Gas fastener	-	-	-	-	978743	1	
17	Gas fastener	-	-	-	-	978744	1	
18	LH rearview mirror	-	-	-	-	GU32769860	1	
19	Hose clamp L46 mm	-	-	-	-	GU01609630	4	
	Hose clamp L36 mm	-	-	-	-	GU03609600	1	
20	RH rearview mirror	-	-	-	-	GU32769460	1	
21	Engine stop-start device	-	-	-	-	851998	1	

GRISO V 8V 1200 2007	GU088	00	TAB N.
FRONT MASTER CILINDER			

21

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Front master cilinder	-	-	-	-	GU05660130	1	
2	Front brake lever	-	-	-	-	AP8133510	1	
3	Lever pin	-	-	-	-	AP8113995	1	
4	Tank cap	-	-	-	-	GU05661130	1	
5	U-bolt	-	-	-	-	AP8113993	1	
6	Front brake hose	-	-	-	-	978400	1	
7	Oil pipe screw *	-	-	-	-	AP8133962	1	
8	Gasket	-	-	-	-	GU25656100	2	
9	Brake light switch	-	-	-	-	GU03749845	1	
10	Hex socket screw M4x12	-	-	-	-	GU98370412	1	
11	Washer 4,3x8x1,5	-	-	-	-	GU95021104	1	

GRISO V 8V 1200 2007	GU088	00	TAB N.
CLUTCH CONTROL COMPLETE			

22

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Clutch pump	-	-	-	-	AP8106713	1	
2	Clutch lever	-	-	-	-	AP8118659	1	
3	Lever pin	-	-	-	-	GU03604845	1	
4	U-bolt	-	-	-	-	AP8113993	1	
5	Tank cap	-	-	-	-	AP8113997	1	
6	Microswitch	-	-	-	-	AP8113998	1	
7	Clutch pipe	-	-	-	-	GU06606500	1	
8	Oil pipe screw	-	-	-	-	AP8133594	3	
9	Gasket	-	-	-	-	AP8121915	6	
10	Clutch command cylinder	-	-	-	-	978739	1	
11	Screw w/ flange M6x16*	-	-	-	-	AP8152278	3	
12	Float chambe clutch pipe	-	-	-	-	GU05606630	1	
13	Rubber spacer	-	-	-	-	AP8120594	1	

GRISO V 8V 1200 2007

GU088

00

TAB N.

OIL COOLER

23

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Oil cooler cpl.	-	-	-	-	GU06162000	1	
2	Duct	-	-	-	-	GU06583200	1	
3	Screw w/ flange M6X30	-	-	-	-	AP8152281	3	
4	Washer 6,4x13x1,5	-	-	-	-	GU95005306	3	
5	Bush	-	-	-	-	AP8121032	3	
6	Spacer 7x10x11	-	-	-	-	GU91180711	3	
7	Rubber spacer *	-	-	-	-	AP8120030	3	
8	Cover	-	-	-	-	GU06583000	1	
9	Spacer	-	-	-	-	GU06583600	1	
10	Screw M8X40	-	-	-	-	GU98690440	3	
11	Washer 8,4X13X0,8	-	-	-	-	GU14615901	3	
12	Screw M10x50	-	-	-	-	GU98690550	1	
13	Washer 10,5x16x1	-	-	-	-	GU19149800	1	
14	Water cooler grille	-	-	-	-	GU06582600	1	
15	Hex socket screw M5X12	-	-	-	-	GU98230512	4	
16	T bush	-	-	-	-	AP8121811	4	

GRISO V 8V 1200 2007

GU088

00

TAB N.

24

BLOW-BY SYSTEM

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Housing	-	-	-	-	978767	1	GD059
2	Plate	-	-	-	-	GU06412300	1	-
3	Rubber spacer *	-	-	-	-	AP8120030	1	-
4	Screw w/ flange M6x16*	-	-	-	-	AP8152278	1	-
5	Screw w/ flange M6x12*	-	-	-	-	AP8152277	1	-
6	Spacer	-	-	-	-	GU06164630	1	-
7	Clip M6	-	-	-	-	GU28576591	1	-
8	Pipe	-	-	-	-	GU06159300	1	GD069
9	Reduction	-	-	-	-	GU01161331	1	-
10	Gasket	-	-	-	-	GU01154230	1	-
11	White hose clip D.13,5x6	-	-	-	-	AP8102765	1	-
12	Breather pipe	-	-	-	-	GU00823955080	1	-
13	Hose clamp	-	-	-	-	GU93306011	5	-
14	Hose clamp	-	-	-	-	AP8102520	1	-
15	White hose clip d.13x6	-	-	-	-	AP8102764	1	-
16	Breather pipe	-	-	-	-	978765	2	GD069
17	Cap	-	-	-	-	978781	1	-

GRISO V 8V 1200 2007	GU088	00	TAB N.
FUEL SUPPLY			

25

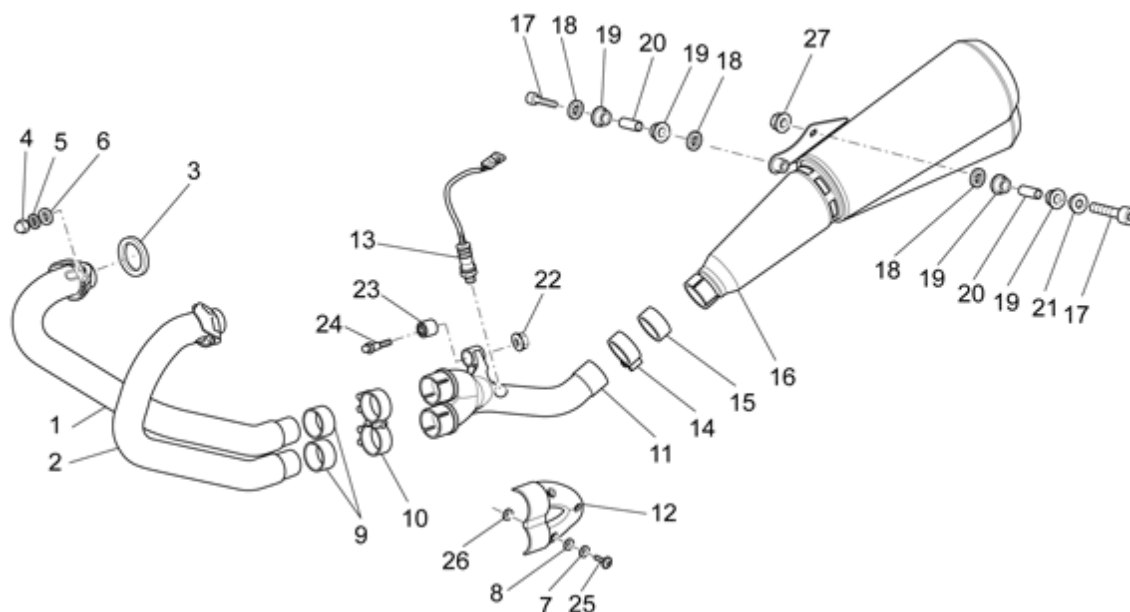
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Fuel pump cpl.	-	-	-	-	GU06107200	1	DA139
2	Screw w/ flange M5x16	-	-	-	-	AP8152273	6	-
3	Fuel pipe, cpl.	-	-	-	-	978745	1	DA399
4	Pipe	-	-	-	-	GU05135930	1	-
5	Screw w/ flange M5x16	-	-	-	-	AP8152298	2	-

GRISO V 8V 1200 2007	GU088	00	TAB N.
AIR BOX			

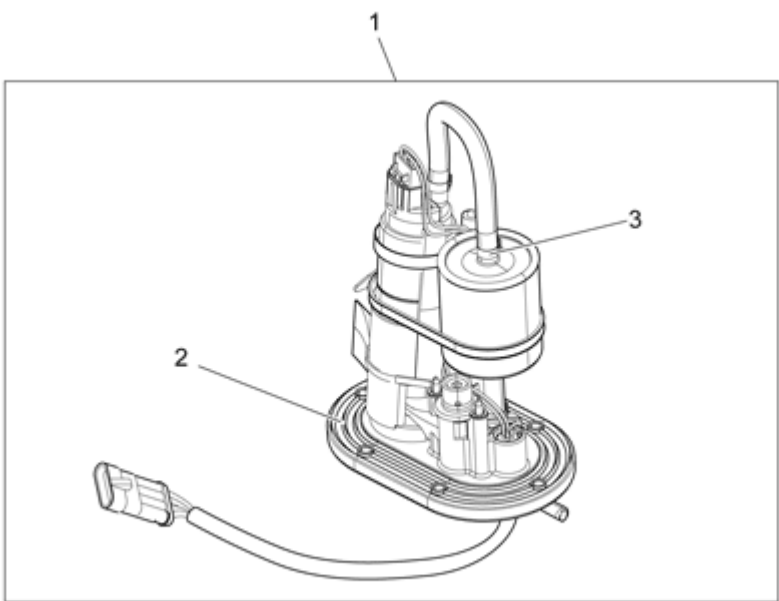
26

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Air box	-	-	-	-	GU06114000	1	EB019
2	Air filter	-	-	-	-	AP8104329	1	EB029
3	Inspection cover	-	-	-	-	GU06113300	1	EB099
4	Gasket D4	-	-	-	-	AP8120593	1	EB129
5	Phillips screw, SWP M5X20	-	-	-	-	AP8152329	10	-
6	Protection	-	-	-	-	GU06114200	1	EB209
7	Cover	-	-	-	-	GU06113700	1	EB009
8	Intake hose	-	-	-	-	AP8144164	1	EB059
9	Self-tap screw 2,9x12	-	-	-	-	AP8150421	2	-
10	Air temp. Sensor	-	-	-	-	GU30729330	1	AN059
11	Gasket	-	-	-	-	GU30027931	1	-
12	Filter housing support spindle	-	-	-	-	AP8221270	2	-
13	Rubber spacer	-	-	-	-	AP8220526	2	-
14	Washer 6,4x12	-	-	-	-	GU03013800	2	-
15	Cap nut M6x1	-	-	-	-	GU92787006	2	-
16	Screw w/ flange M6x20	-	-	-	-	AP8152279	2	-
17	T bush *	-	-	-	-	AP8221023	2	-
18	Fuel pipe 6x10	-	-	-	-	AP8144038	2	-
19	Hose clamp D10,1*	-	-	-	-	AP8101595	4	-
20	Plug	-	-	-	-	AP8120876	2	-
21	Rubber spacer *	-	-	-	-	AP8120030	2	-

	GRISO V 8V 1200 2007	GU088	00	TAB N.	27
	EXHAUST UNIT				



Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	RH exhaust pipe	-	-	-	-	978396	1	FA00A
2	LH exhaust pipe	-	-	-	-	978397	1	FA00B
3	Gasket	-	-	-	-	976376	2	AO03*
4	Cap nut M8x1,25	-	-	-	-	GU92787008	4	-
5	Washer 8,4X13X0,8	-	-	-	-	GU14615901	4	-
6	Washer 8,4x14,57x1,6	-	-	-	-	GU95005308	4	-
7	Washer 6,4x12	-	-	-	-	GU03013800	3	-
8	Washer 6,5x20x1,5	-	-	-	-	GU95005320	3	-
9	Gasket	-	-	-	-	GU06123500	2	-
10	Hose clamp	-	-	-	-	GU06123401	1	-
11	Central exhaust pipe	-	-	-	-	GU06124800	1	FA069
12	Heat protection	-	-	-	-	GU06121900	1	FA019
13	Lamda sensor	-	-	-	-	GU32727010	1	AN079
14	Hose clamp	-	-	-	-	GU06126900	1	FC029
15	Gasket	-	-	-	-	GU05128230	1	FC019
16	Silencer	-	-	-	-	978242	1	FC009
17	Hex socket screw M8X45	-	-	-	-	GU98680445	2	-
18	Washer 8,5x24x2	-	-	-	-	GU95005312	3	-
19	Rubber exhaust	-	-	-	-	AP8144071	4	-
20	Spacer *	-	-	-	-	AP8121773	2	-
21	Silencer fixing bush	-	-	-	-	AP8134378	1	-
22	Self-locking nut M10*	-	-	-	-	AP8152301	1	-
23	Silent-block	-	-	-	-	AP8220346	1	-
24	Screw w/ flange M10x55	-	-	-	-	AP8152410	1	-
25	Hex socket screw M6x10	-	-	-	-	GU98370609	3	-
26	Washer 5,5X20X1	-	-	-	-	AP8121513	3	-
27	Nut M8x1,25	-	-	-	-	GU92650138	1	-

	GRISO V 8V 1200 2007		GU088	00	TAB N.	28		
	INTERNAL FUEL PUMP							
								

Pos.	Description	Year	I_M_	Country	Version		Code	Q.ty	P.Cod.
1	Fuel pump cpl.	-	-	-	-	-	GU06107200	1	DA139
2	Gasket	-	-	-	-	-	GU05107430	1	DA429
3	Hose clamp 11,3	-	-	-	-	-	GU01108490	4	-

GRISO V 8V 1200 2007

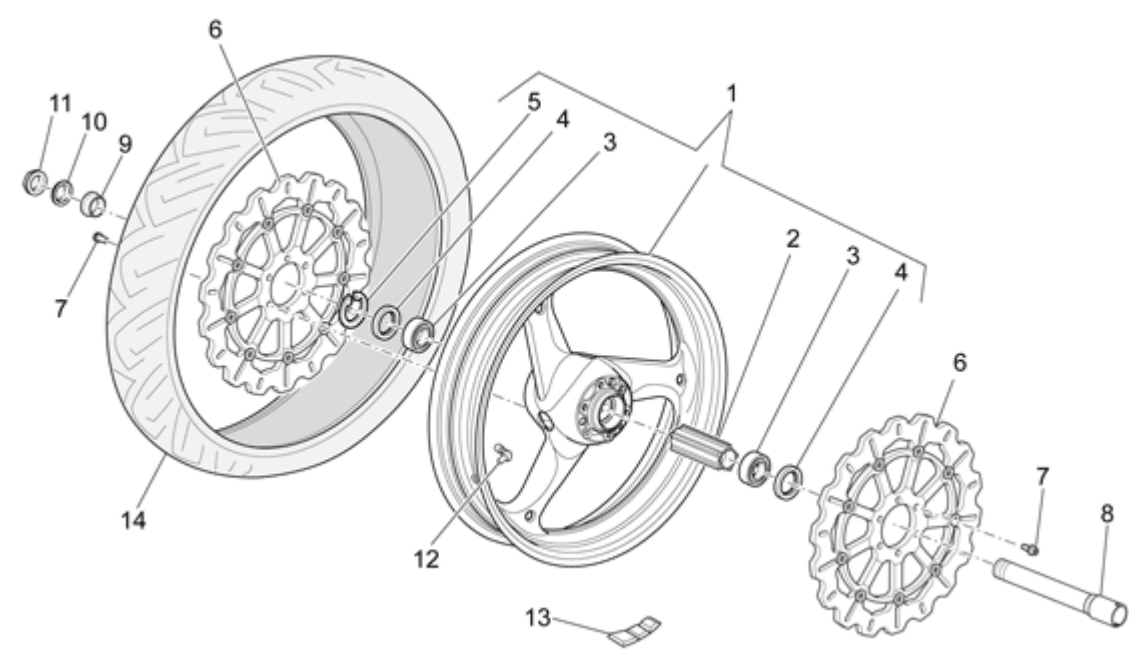
GU088

00

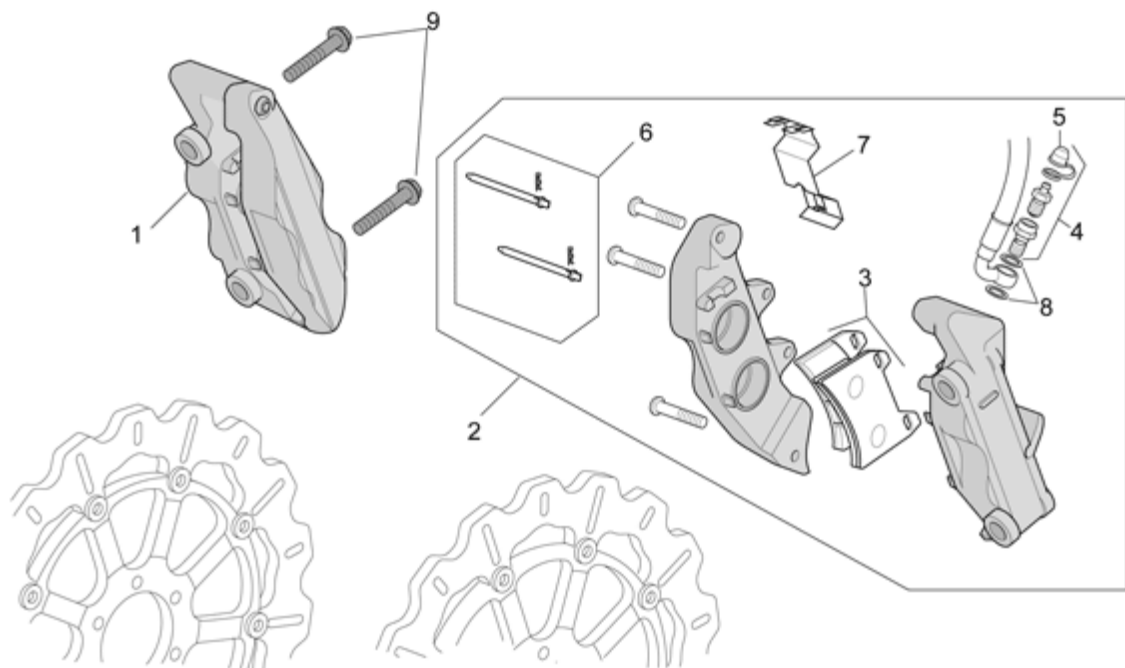
TAB N.

29

FRONT WHEEL



Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Front wheel, black 3,5x17"	-	-	-	-	GU05610530	1	BB00E
2	Spacer	-	-	-	-	GU05615230	1	BB32E
3	Ball bearing 25x47x12	-	-	-	-	AP8125777	2	BB01E
4	Gasket ring 30x47x7	-	-	-	-	AP8125773	2	-
5	Circlip	-	-	-	-	AP8125779	1	-
6	Front brake disc 320	-	-	-	-	977835	2	IA08*
7	Screw w/ flange M8x20	-	-	-	-	AP8152286	12	IA09*
8	Front wheel spindle	-	-	-	-	GU05614130	1	BB03E
9	Spacer	-	-	-	-	GU06616300	1	-
10	Washer 25,2X36X1	-	-	-	-	GU95005325	1	-
11	Nut	-	-	-	-	GU01612190	1	BB24E
12	Tubeless tyre valve	-	-	-	-	GU03617710	1	BB07E
13	Counterweight	-	-	-	-	GU14616150	1	BB29E

		GRISO V 8V 1200 2007		GU088	00	TAB N.		30	
FRONT BRAKE CALIPER									
									
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.	
1	RH front brake caliper, black P432	-	-	-	-	978464	1	IA06U	
2	LH front brake caliper, black P432	-	-	-	-	978465	1	IA06T	
3	Pads pair	-	-	-	-	GU01654630	2	IA07*	
4	Air bleed valve	-	-	-	-	978466	2	-	
5	Bleed valve cap 20 pc.	-	-	-	-	AP8133596	1	-	
6	Pins+Caliper springs	-	-	-	-	GU01659130	2	IA11E	
7	Spring	-	-	-	-	GU01659131	2	IA11E	
8	Gasket	-	-	-	-	GU25656100	4	-	
9	Screw w/ flange M10x55	-	-	-	-	AP8152414	4	IA30*	

GRISO V 8V 1200 2007	GU088	00	TAB N.
REAR WHEEL			

31

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Rear wheel, black 5,5x17"	-	-	-	-	GU05630530	1	BB00F
2	Tubeless tyre valve	-	-	-	-	GU03617710	1	BB07F
3	Conical bush	-	-	-	-	GU05632730	4	BB06F
4	Screw w/ flange M12x65	-	-	-	-	GU97202665	4	BB06F
5	Cover	-	-	-	-	GU05634430	1	BB10F
6	Rear brake disc	-	-	-	-	GU05635730	1	IA08F
7	Screw	-	-	-	-	GU30611460	6	IA09F
8	Counterweight	-	-	-	-	GU14616150	1	BB29F
9	Dust cover ring	-	-	-	-	977056	1	-

GRISO V 8V 1200 2007

GU088

00

TAB N.

32

REAR MASTER CYLINDER

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Rear master cylinder	-	-	-	-	978434	1	IA00F
2	Pump connection overhaul unit	-	-	-	-	GU19659500	1	-
3	Rubber bellows	-	-	-	-	AP8113288	1	-
4	Screw w/ flange M6x20	-	-	-	-	AP8152279	2	-
5	Hose clamp D10,1*	-	-	-	-	AP8101595	2	-
6	Oil pipe	-	-	-	-	GU00823950050	1	IA319
7	Brake oil tank complete	-	-	-	-	GU05663530	1	IA12F
8	Tank cap	-	-	-	-	GU17661052	1	IA329
9	Tank support	-	-	-	-	GU05666030	1	-
10	Phillips screw, SWP M5X20	-	-	-	-	AP8152329	1	-
11	T bush *	-	-	-	-	AP8221145	1	-
12	Screw w/ flange M6x16*	-	-	-	-	AP8152278	1	-
13	O-ring OR112	-	-	-	-	AP8120178	1	-
14	Master cylinder rod	-	-	-	-	977041	1	IA199
15	Nut M6*	-	-	-	-	GU92606206	1	-
16	Fork	-	-	-	-	AP8113081	1	IA209
17	Gear selector fork clips	-	-	-	-	AP8113082	1	-
18	Rear brake lever	-	-	-	-	GU06677000	1	IA01F
19	Brake lever pin	-	-	-	-	AP8121221	1	-
20	Lever rubber	-	-	-	-	AP8120912	1	IA169
21	Hex socket screw M6x16	-	-	-	-	GU98682316	1	-
22	Circlip d9	-	-	-	-	AP8150462	1	-
23	Rear brake lever spring	-	-	-	-	AP8121927	1	IA229
24	Rear brake lever pin	-	-	-	-	AP8121223	1	IA179
25	O-ring 11,11x1,78	-	-	-	-	AP8144007	2	-
26	Washer 10,5x22x2,5	-	-	-	-	GU95008310	1	-
27	Brake light switch	-	-	-	-	AP8112996	1	CD00F
28	Black hose D8	-	-	-	-	AP8101890	3	-
29	Hex socket screw M5X10	-	-	-	-	GU98350210	3	-

GRISO V 8V 1200 2007	GU088	00	TAB N.	33
REAR BRAKE CALIPER				

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Rear brake caliper, black	-	-	-	-	978414	1	IA06F
2	Screw w/ flange M10x30*	-	-	-	-	AP8152320	2	IA30F
3	Pads pair	-	-	-	-	GU05654630	1	IA07F
4	Pin+split pin	-	-	-	-	GU05659130	1	IA11F
5	Spring	-	-	-	-	GU05659030	1	IA11F
6	Gasket	-	-	-	-	AP8121915	4	-
7	Screw	-	-	-	-	AP8133597	1	-
8	Air bleed valve	-	-	-	-	AP8133595	1	IA11F
9	Bleed valve cap 20 pc.	-	-	-	-	AP8133596	1	IA11F
10	Rear brake hose	-	-	-	-	978364	1	IA05F
11	Oil pipe screw *	-	-	-	-	AP8133962	1	-
12	Cable-guide hook	-	-	-	-	AP8202238	4	-
13	Cable-guide D8	-	-	-	-	AP8201808	5	-

GRISO V 8V 1200 2007	GU088	00	TAB N.	34
----------------------	-------	----	--------	----

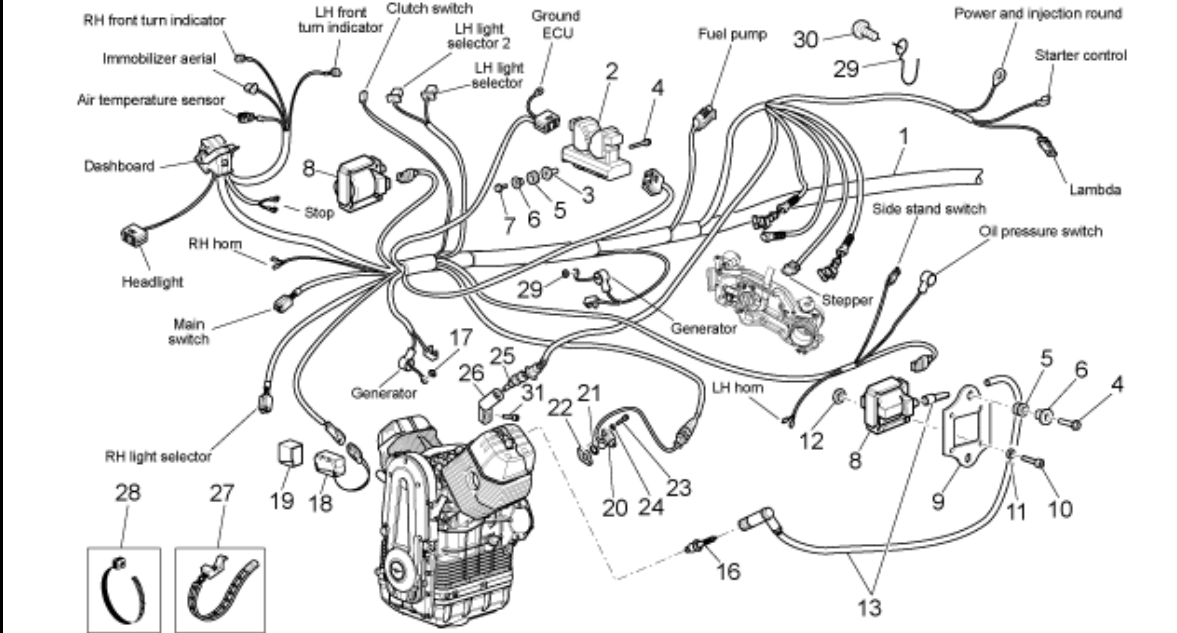
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Cpl headlightsteering headligh	-	-	AUS-J-UK	-	GU06740501	1	CB109
	Headlight	-	-	EU	-	GU06740500	1	CB109
2	Headlight cap, chr.	-	-	-	-	GU06740200	1	CB189
3	Chromed ring nut	-	-	-	-	GU31740383	1	CB129
4	Lamp 12V-55/60W	-	-	-	-	GU93450232	1	CB149
5	Lamp 12V-5W	-	-	-	-	GU93450105	1	CB149
6	Screw M8x30	-	-	-	-	GU98700430	2	-
7	Washer 8,4X13X0,8	-	-	-	-	GU14615901	2	-
8	RH support	-	-	-	-	GU06496100	1	BC129
9	LH support	-	-	-	-	GU06496200	1	BC129
10	Nut M8x1,25	-	-	-	-	GU92650138	2	-
11	Hex socket screw M6x35	-	-	-	-	GU98612335	2	-
12	T bush *	-	-	-	-	AP8221023	1	-
13	Rubber spacer *	-	-	-	-	AP8120675	1	-
14	Hex socket screw M6x18	-	-	-	-	GU98230619	1	-
15	Screw w/ flange M8x25*	-	-	-	-	AP8152287	2	-
16	RH front/LH rear turn indic.	-	-	-	-	GU06750600	1	CB09T
17	Hex socket screw M6X35	-	-	-	-	GU98690335	2	-
18	Cap nut M6x1	-	-	-	-	GU92787006	2	-
19	Turn indicator lens	-	-	-	-	GU06753700	2	CB01*
20	Lamp 12V-10W	-	-	-	-	GU93450127	2	-
21	LH front/RH rear turn indic.	-	-	-	-	GU06751601	1	CB09U
22	Electric hom L	-	-	-	-	GU01743791	1	CB069
23	Electric hom H	-	-	-	-	GU01743790	1	CB069
24	Hex socket screw M8x16	-	-	-	-	GU98350416	2	-
25	Spring washer	-	-	-	-	GU95021108	2	-

GRISO V 8V 1200 2007	GU088	00	TAB N.
TAILLIGHT			

35

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Taillight	-	-	-	-	GU06740900	1	CB049
2	Self-tap screw 5x14	-	-	-	-	AP8150509	4	-
3	Number-plate light	-	-	-	-	AP8127098	1	CB009
4	Hex socket screw M5x22	-	-	AUS-EU-J-UK	-	GU98680222	1	-
5	Washer 5,3x10x0,8	-	-	-	-	GU95008205	1	-
6	Bush	-	-	-	-	GU91120507	1	-
7	Support rubber part	-	-	-	-	GU32474710	1	-
8	Self-locking nut M5*	-	-	-	-	AP8152306	1	-
9	Lamp 12V-5W	-	-	-	-	GU93450105	1	-
10	Plate light wiring	-	-	-	-	977795	1	CA179
11	RH front/LH rear turn indic.	-	-	-	-	GU06750600	1	CB09V
12	Turn indicator lens	-	-	-	-	GU06753700	2	CB01*
13	Lamp 12V-10W	-	-	-	-	GU93450127	2	-
14	Hex socket screw M6x18	-	-	-	-	GU98370619	2	-
15	Self-locking nut M6*	-	-	-	-	AP8152299	2	-
16	LH front/RH rear turn indic.	-	-	-	-	GU06751601	1	CB09W

		GRISO V 8V 1200 2007		GU088		00		TAB N.		36
ELECTRICAL SYSTEM I										

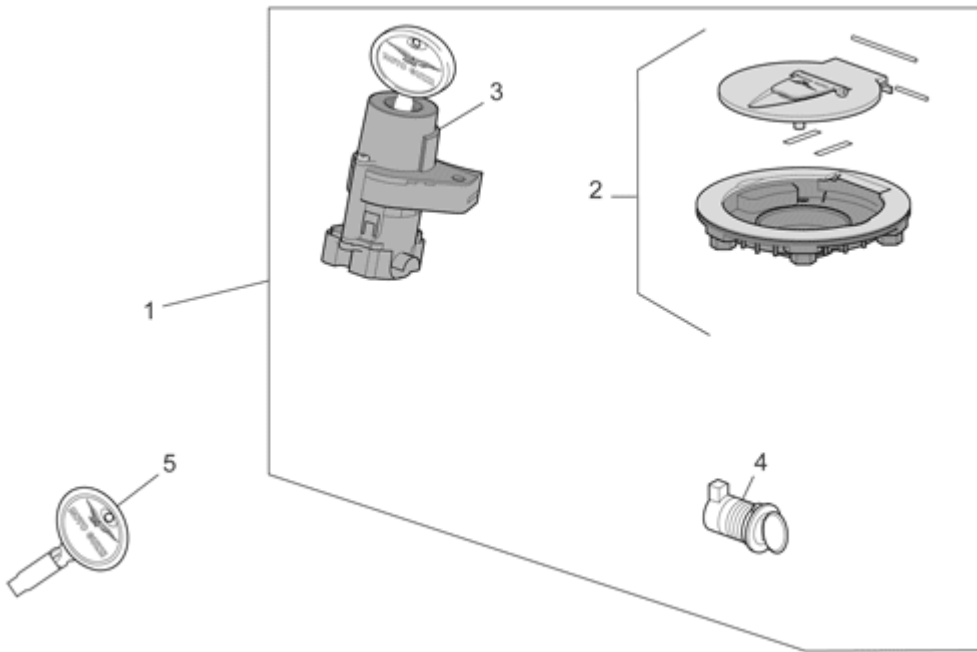


Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Main wiring harness	-	-	-	-	978407	1	CA009
2	ECU	-	-	-	-	978406	1	AM049
3	Bush	-	-	-	-	GU05729230	2	-
4	Screw w/ flange M6x20	-	-	-	-	AP8152279	6	-
5	Rubber spacer *	-	-	-	-	AP8120030	6	-
6	T bush *	-	-	-	-	AP8221023	6	-
7	Screw w/ flange M6x35	-	-	-	-	AP8152282	2	-
8	HT coil	-	-	-	-	GU30716500	2	AM019
9	Coil holder	-	-	-	-	GU05716730	2	BA26E
10	Hex socket screw M4X25	-	-	-	-	GU98682125	8	-
11	Washer 4,3x8x0,5	-	-	-	-	GU95008204	8	-
12	Nut M4x0,7	-	-	-	-	GU92630104	8	-
13	HT wire	-	-	-	-	640912	2	CA38E
16	Spark plug NGK PNR8B	-	-	-	-	GU05717030	2	AM03*
17	Self-locking nut M6*	-	-	-	-	AP8152299	1	-
18	Inclination sensor	-	-	-	-	AP8124266	1	CA369
19	Rubber sensor support	-	-	-	-	AP8144046	1	-
20	Phase/revolution sensor	-	-	-	-	GU01721600	1	AN049
21	O-ring	-	-	-	-	GU90706141	1	-
22	Gasket 0,3mm	-	-	-	-	GU01722700	1	AO349
	Gasket 0,4mm	-	-	-	-	GU01722701	1	AO349
	Gasket 0,6mm	-	-	-	-	GU01722702	1	AO349
	Gasket 0,8mm	-	-	-	-	GU01722703	1	AO349
	Gasket 1mm	-	-	-	-	GU01722704	1	AO349
	Gasket 1,5mm	-	-	-	-	GU01722705	1	AO349
	Gasket 0,5 mm	-	-	-	-	GU29722760	1	AO349
23	Hex socket screw M5x12	-	-	-	-	GU98682212	2	-
24	Washer 5,3x10x0,8	-	-	-	-	GU95008205	2	-
25	Oil temperature sensor	-	-	-	-	GU29729461	1	AN099
26	Sensor support	-	-	-	-	976556	1	-
27	Hose clamp	-	-	-	-	GU06609600	3	-
28	Hose clamp 3,6x20,6	-	-	-	-	GU14609650	13	-
	Hose clamp 2,4x92	-	-	-	-	GU49609601	7	-
	Hose clamp 3,6x375	-	-	-	-	GU93304390	2	-
29	Fairlead	-	-	-	-	AP8121475	1	-
30	Screw w/ flange M8x16*	-	-	-	-	AP8152285	1	-
31	Hex socket screw M10x20	-	-	-	-	GU98683520	1	-

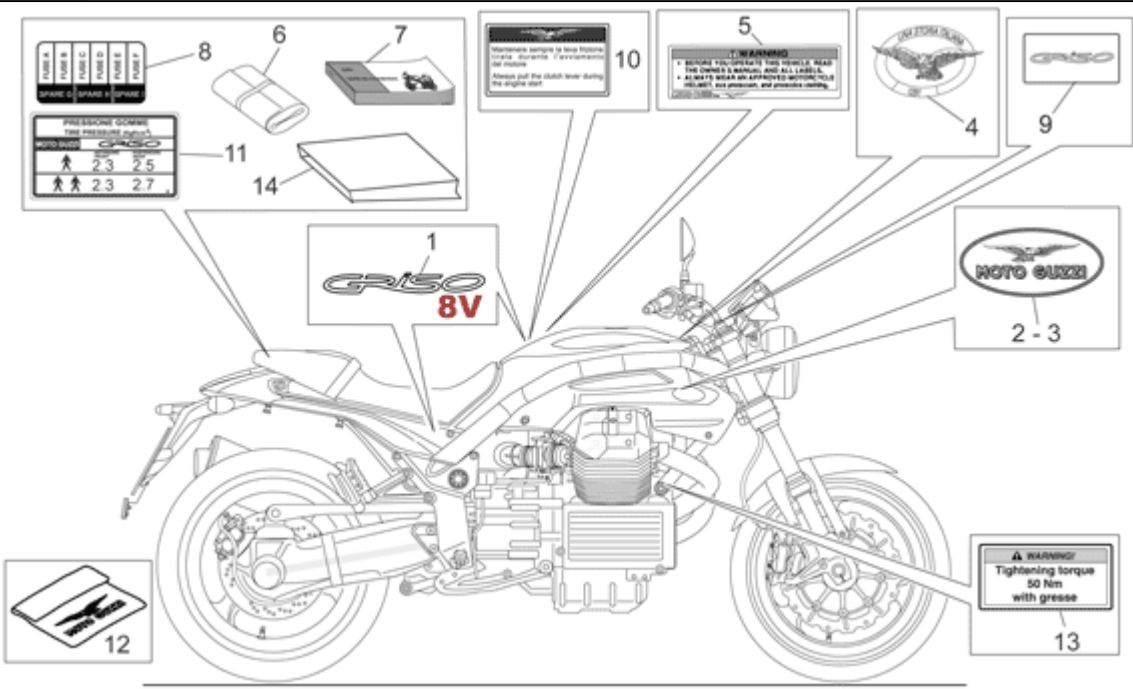
GRISO V 8V 1200 2007	GU088	00	TAB N.
ELECTRICAL SYSTEM II			

37

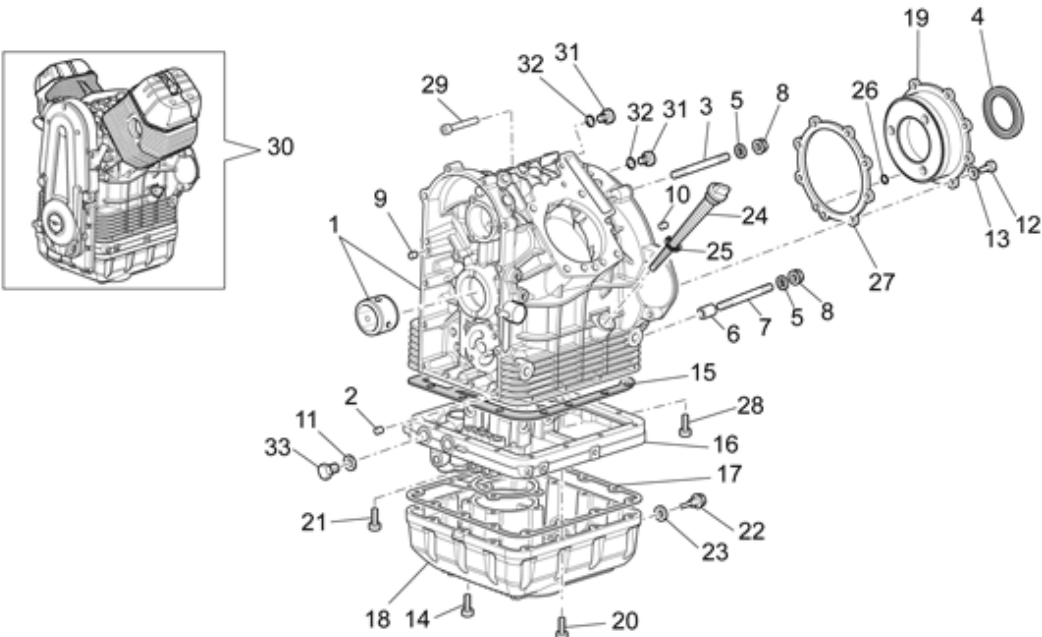
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Main wiring harness	-	-	-	-	978407	1	CA009
2	Battery 12V-20Ah	-	-	-	-	GU05704531	1	CC009
3	Wiring	-	-	-	-	GU32748010	1	CA079
4	Rubber fuse box	-	-	-	-	AP8112811	1	CA069
5	Fuse 30A	-	-	-	-	GU28742562	3	CA349
6	Ground-battery lead	-	-	-	-	GU06747900	1	CA039
7	Relay 12V/30A	-	-	-	-	AP8224462	3	CD029
8	Rubber spacer *	-	-	-	-	AP8220283	3	-
9	Injection relay	-	-	-	-	AP8124869	2	CD189
10	Relay rubber	-	-	-	-	AP8220546	2	-
11	Fuse 20A	-	-	-	-	977773	2	CA349
	Fuse 15A	-	-	-	-	977772	4	CA349
	Fuse 3A	-	-	-	-	977769	2	CA349
12	Clamp	-	-	-	-	GU06746300	1	-
13	Screw w/ flange M5x9	-	-	-	-	AP8152339	2	-
14	Clip M5	-	-	-	-	AP8102375	4	-
15	Clamp	-	-	-	-	GU06477000	1	-
16	Hex socket screw M5x15	-	-	-	-	GU98682215	2	-
17	Hose clamp 3,6x20,6	-	-	-	-	GU14609650	13	-
	Hose clamp 2,4x92	-	-	-	-	GU49609601	7	-
18	Washer 8,4x15x1,7	-	-	-	-	GU95129131	1	-
19	Nut M8x1,25	-	-	-	-	GU92609408	1	-
20	Hose clamp	-	-	-	-	GU06609600	3	-

		GRISO V 8V 1200 2007		GU088		00		TAB N.		38	
LOCK HARDWARE KIT											
											
Pos.	Description	Year	I_M_	Country	Version		Code	Q.ty	P.Cod.		
1	Lock hardware kit	-	-	-	-	-	GU06736800	1	DH009		
2	Tank cap	-	-	-	-	-	GU06103900	1	DA029		
3	Main switch - steering lock	-	-	-	-	-	GU06782500	1	DH029		
4	Saddle lock	-	-	-	-	-	GU05466830	1	DH039		
5	Non indented key blank	-	-	-	-	-	GU05735530	1	DH099		

		GRISO V 8V 1200 2007		GU088		00		TAB N.		39	
PLATE SET-DECAL-OP.HANDBOOKS											



Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Decal "Griso 8V"	-	-	-	-	978403	2	DI109
2	LH Name plate,red/gold AL	-	-	-	-	GU06917400	1	DI079
3	RH Name plate,red/gold AL	-	-	-	-	GU06917300	1	DI079
4	Decal "Italian Story"	-	-	-	-	GU05917530	1	DI079
5	Decal "Attention"	-	-	-	-	GU30944300	1	DI079
6	Toolkit	-	-	-	-	978882	1	DG099
7	Operator's handbook I-F-D-E-NL-UK	-	-	AUS-EU-J-UK	-	978409	1	DG109
8	Sticker "schema fusibili"	-	-	-	-	GU05945030	1	DI049
9	Name plate "Griso"	-	-	-	-	GU06517700	1	DI079
10	Decal Engine Start	-	-	-	-	GU05944930	1	DI049
11	Tyre pressure decal	-	-	AUS-EU-J-UK	-	GU06926000	1	DI049
12	Bike cover	-	-	-	-	GU30970200	1	-
13	Decal Warning	-	-	-	-	GU05944530	1	DI079
14	Bag for document	-	-	-	-	GU05900130	1	-

 GRISO V 8V 1200 2007 GU088 00 TAB N. 40								
								
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Crankcase black	-	-	-	-	976539	1	AH009
2	Pin	-	-	-	-	411209	2	-
3	Stud bolt M8X66	-	-	-	-	GU96508066	3	AH199
4	Gasket ring	-	-	-	-	GU90405367	1	AO15F
5	Washer 8,4X13X0,8	-	-	-	-	GU14615901	5	-
6	Coupling bush	-	-	-	-	GU12018900	2	-
7	Stud bolt M8x75	-	-	-	-	GU96508075	2	AH199
8	Flanged nut M8	-	-	-	-	GU92660021	5	-
9	Pin	-	-	-	-	GU95512081	2	-
10	Pin	-	-	-	-	560110	1	-
11	Gasket	-	-	-	-	GU01154230	2	-
12	Hex screw M8x25	-	-	-	-	GU98084425	8	-
13	Spring washer 8x15x0,3	-	-	-	-	GU61270300	8	-
14	Hex socket screw M6X30	-	-	-	-	GU98682330	4	-
15	Gasket	-	-	-	-	GU01003651	1	AO329
16	Flange black	-	-	-	-	976502	1	AH369
17	Gasket	-	-	-	-	GU05003630	1	AO459
18	Oil sump black	-	-	-	-	976486	1	AH269
19	Complete flange	-	-	-	-	874213	1	AI009
20	Hex socket screw m6x55	-	-	-	-	AP4ADN000007	14	-
21	Hex socket screw M6x60	-	-	-	-	GU98680360	2	-
22	Oil unload plug M10X1	-	-	-	-	GU31003766	1	AH109
23	Gasket 10x18x1,5	-	-	-	-	GU01528930	1	-
24	Oil level plug	-	-	-	-	GU05004930	1	AH119
25	O-ring 17,86X2,62	-	-	-	-	GU90706178	1	-
26	O-ring 7,5X2	-	-	-	-	874980	1	AO15F
27	Gasket	-	-	-	-	874257	1	AO429
28	Hex socket screw M6X40	-	-	-	-	GU98680340	2	-
29	Screw w/ flange M8x45*	-	-	-	-	AP8152291	1	-
30	Engine cpl.	-	-	-	-	976929	1	A9989
31	Oil plug	-	-	-	-	GU12022600	2	-
32	O-ring 20,24X2,62	-	-	-	-	GU90706203	2	-
33	Plug	-	-	-	-	GU95980216	2	-

GRISO V 8V 1200 2007	GU088	00	TAB N.
CRANK-CASE II			

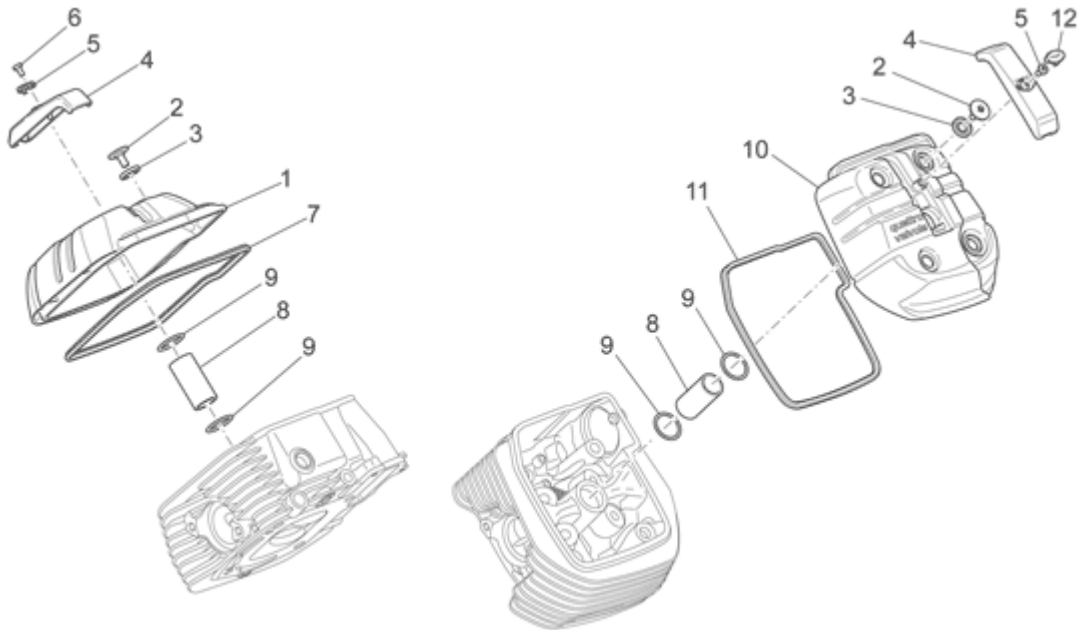
41

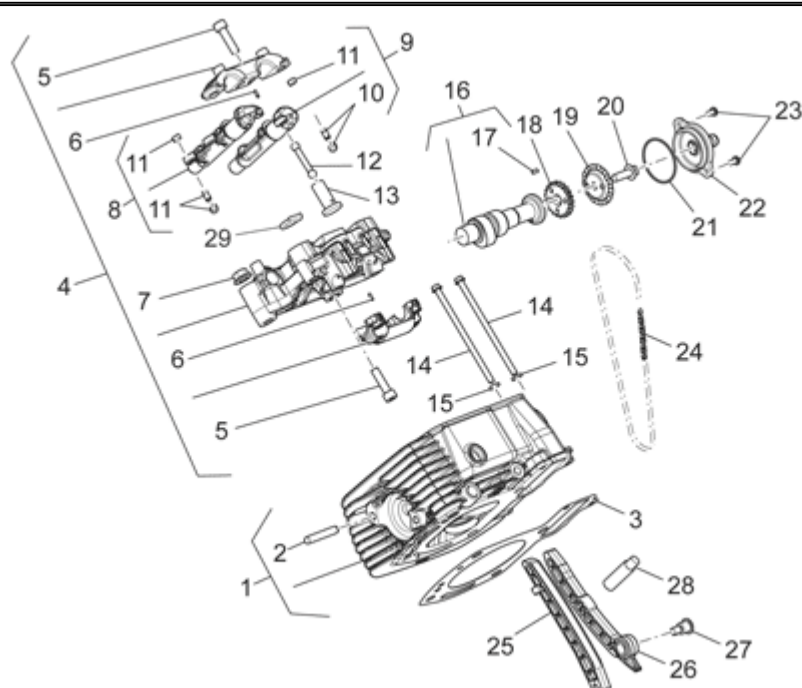
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Timing cover black	-	-	-	-	976480	1	AH359
2	Gasket ring 22x35x7viton	-	-	-	-	GU90412237	1	AO15E
3	Plug	-	-	-	-	GU05002130	1	-
4	Locating dowel	-	-	-	-	277916	2	-
5	Plug	-	-	-	-	976554	1	-
6	Hex socket screw M6x20	-	-	-	-	GU98682320	2	-
7	Bush 6,4x8,4x10,5	-	-	-	-	GU91120607	2	-
8	O-ring 34,65x1,78viton	-	-	-	-	GU90706347	1	-
9	Cover gasket	-	-	-	-	976478	1	AO449
10	Hex socket screw M8x55	-	-	-	-	AP8150046	4	-
11	Hex socket screw M6X30	-	-	-	-	GU98682330	10	-
12	Alternator cover grey	-	-	-	-	GU05001630	1	AH039
13	Bush 6,8x8,8x5,8	-	-	-	-	GU91120606	6	-
14	Hex socket screw M6x16	-	-	-	-	GU98682316	5	-

GRISO V 8V 1200 2007	GU088	00	TAB N.
CYLINDER HEAD - VALVES			

42

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	RH cylinder head	-	-	-	-	872756	1	AA00A
2	LH cylinder head	-	-	-	-	872755	1	AA00B
3	Intake valve	-	-	-	-	872695	4	AA01N
4	Exhaust valve	-	-	-	-	872696	4	AA01O
5	Lower cup	-	-	-	-	874127	4	-
6	Valve gasket ring	-	-	-	-	436438	8	AO20*
7	Valve spring	-	-	-	-	874335	8	AA02*
8	Valve half-cone	-	-	-	-	285846	8	AA03*
9	Upper cup	-	-	-	-	874126	8	-
10	Stud bolt M8X3X46	-	-	-	-	827018	4	AA15*
11	Pin 11,8X10	-	-	-	-	825597	8	-

	GRISO V 8V 1200 2007	GU088	00	TAB N.	43			
	HEAD COVER							
								
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	RH Head cover	-	-	-	-	873671	2	AH07*
2	Special screw	-	-	-	-	842291	8	-
3	Damper drift	-	-	-	-	830249	8	-
4	Spark plug cover	-	-	-	-	872726	2	AH07*
5	Hex socket screw M5x10	-	-	-	-	GU98230510	2	-
6	RH Name plate "Moto Guzzi"	-	-	-	-	976560	1	-
7	RH gasket	-	-	-	-	872742	1	AO14*
8	Spark plug pipe	-	-	-	-	873668	2	AO14*
9	O-ring 26X2,5	-	-	-	-	873626	2	-
10	LH Head cover	-	-	-	-	873670	1	AH07*
11	LH gasket	-	-	-	-	872741	1	AO14*
12	LH Name plate "Moto Guzzi"	-	-	-	-	976559	1	-

		GRISO V 8V 1200 2007		GU088		00		TAB N.		44
LH CYLINDER TIMING SYSTEM										
										
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.		
1	RH cylinder head	-	-	-	-	872756	1	AA00A		
2	Stud bolt M8X3X46	-	-	-	-	827018	4	AA15*		
3	Cylinder head gasket 0,65 mm	-	-	-	-	874621	2	AO01*		
	Cylinder head gasket 0,85 mm	-	-	-	-	874622	2	AO01*		
	Cylinder head gasket 1,05 mm	-	-	-	-	976311	2	AO01*		
4	RH.Rocker arm support	-	-	-	-	873426	1	AC38A		
5	Screw	-	-	-	-	15792	6	-		
6	Pin D. 2,5	-	-	-	-	872759	4	-		
7	Nut M10x1,25	-	-	-	-	825694	8	-		
8	Rocker arm assy.	-	-	-	-	976359	1	AC08*		
9	Rocker arm assy.	-	-	-	-	976360	1	AC08*		
10	Adjuster screw	-	-	-	-	873850	4	AC099		
11	Nut	-	-	-	-	484819	4	-		
12	Rocker arm rod	-	-	-	-	873631	4	AC319		
13	Tappet closing	-	-	-	-	873927	4	AC309		
14	Screw w/ flange M6x120	-	-	-	-	487444	2	-		
15	Spacer	-	-	-	-	220716	2	-		
16	Camshaft	-	-	-	-	976445	1	AC059		
17	Pin	-	-	-	-	484993	1	-		
18	Timing gear	-	-	-	-	976350	1	AC139		
19	sheet oil breather	-	-	-	-	874601	1	-		
20	Screw w/ flange	-	-	-	-	843060	1	-		
21	O-ring 47,35X1,78	-	-	-	-	872814	1	-		
22	Breather cover cpl.	-	-	-	-	874521	1	-		
23	Hex socket screw M5X10	-	-	-	-	GU98350210	2	-		
24	Camshaft chain	-	-	-	-	976341	1	AC149		
25	Chain guide plate	-	-	-	-	976338	1	AC169		
26	Chain tensioner sliding block	-	-	-	-	976337	1	AC159		
27	Spacer screw	-	-	-	-	974228	1	-		
28	RH chain tensioner	-	-	-	-	873689	1	AC27A		
29	Plate	-	-	-	-	874805	1	-		

GRISO V 8V 1200 2007	GU088	00	TAB N.
RH CYLINDER TIMING SYSTEM			

45

Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	LH cylinder head	-	-	-	-	872755	1	AA00A
2	Stud bolt M8X3X46	-	-	-	-	827018	4	AA15*
3	Cylinder head gasket 0,65 mm	-	-	-	-	874621	2	AO01*
	Cylinder head gasket 0,85 mm	-	-	-	-	874622	2	AO01*
	Cylinder head gasket 1,05 mm	-	-	-	-	976311	2	AO01*
4	LH.Rocker arm support	-	-	-	-	873425	1	AC38B
5	Screw	-	-	-	-	15792	6	-
6	Pin D. 2,5	-	-	-	-	872759	4	-
7	Nut M10x1,25	-	-	-	-	825694	8	-
8	Rocker arm assy.	-	-	-	-	976359	1	AC08*
9	Rocker arm assy.	-	-	-	-	976360	1	AC08*
10	Adjuster screw	-	-	-	-	873850	4	AC099
11	Nut	-	-	-	-	484819	4	-
12	Rocker arm rod	-	-	-	-	873631	4	AC319
13	Tappet closing	-	-	-	-	873927	4	AC309
14	Screw w/ flange M6x120	-	-	-	-	487444	2	-
15	Spacer	-	-	-	-	220716	2	-
16	Camshaft	-	-	-	-	976445	1	AC059
17	Pin	-	-	-	-	484993	1	-
18	Timing gear	-	-	-	-	976350	1	AC139
19	sheet oil breather	-	-	-	-	874601	1	-
20	Screw w/ flange	-	-	-	-	843060	1	-
21	O-ring 47,35X1,78	-	-	-	-	872814	1	-
22	Breather cover cpl.	-	-	-	-	874521	1	-
23	Hex socket screw M5X10	-	-	-	-	GU98350210	2	-
24	Camshaft chain	-	-	-	-	976341	1	AC149
25	Chain guide plate	-	-	-	-	976338	1	AC169
26	Chain tensioner sliding block	-	-	-	-	976337	1	AC159
27	Spacer screw	-	-	-	-	974228	1	-
28	LH chain tensioner	-	-	-	-	873690	1	AC27B
29	Spacer	-	-	-	-	244585	1	-
30	Plate	-	-	-	-	874805	1	-

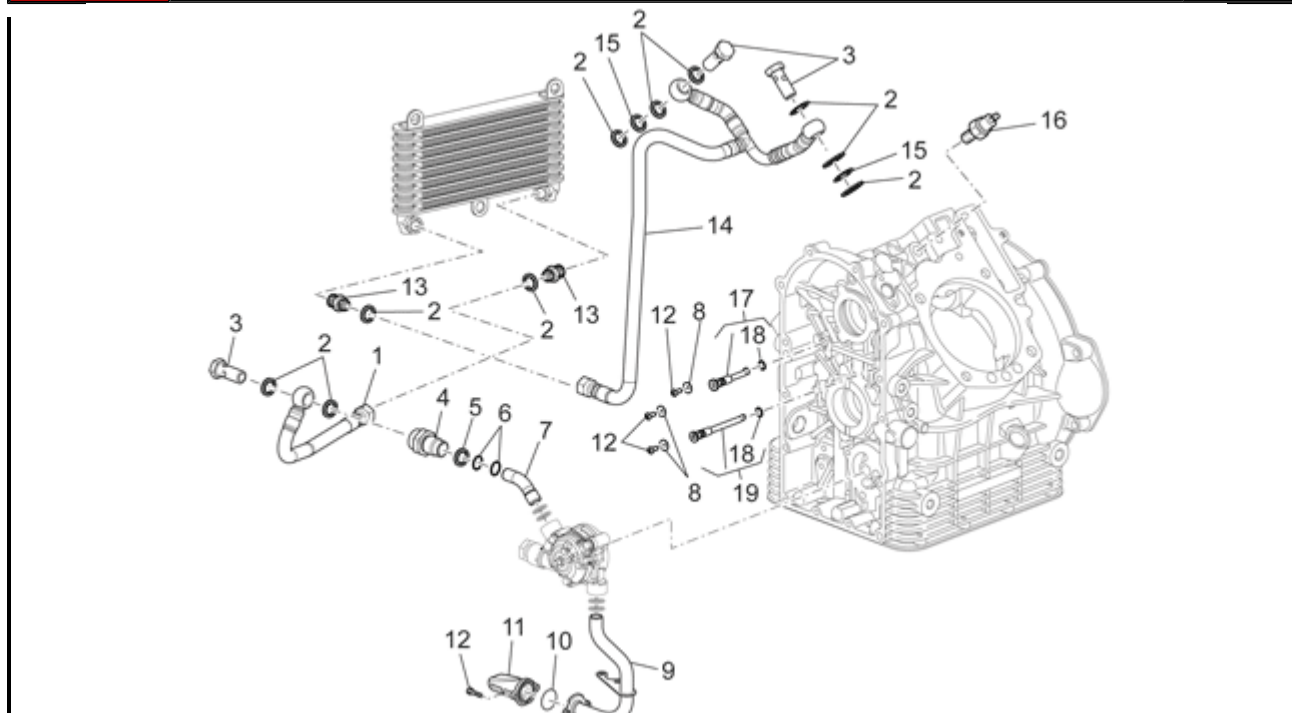
MOTO GUZZI		GRISO V 8V 1200 2007	GU088	00	TAB N.	46		
DRIVE SHAFT - CYLINDER								
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Cylinder with piston assy., RH	-	-	-	-	981008	1	AB00*
2	Piston assy	-	-	-	-	873667	2	AB01*
3	Pistonring set	-	-	-	-	981009	2	AB02*
4	Piston ring	-	-	-	-	874287	2	AB02*
5	Piston ring	-	-	-	-	874288	2	AB02*
6	Piston ring	-	-	-	-	874289	2	AB02*
7	Piston pin	-	-	-	-	874286	2	AD02*
8	Stop ring	-	-	-	-	GU90351039	4	AD03*
9	Cylinder base gasket	-	-	-	-	976312	2	AO01*
10	Stud bolt	-	-	-	-	976304	8	AB04*
11	Pin 11,8X10	-	-	-	-	825597	4	-
12	Cylinder head gasket 1,05 mm	-	-	-	-	976311	2	AO01*
	Cylinder head gasket 0,65 mm	-	-	-	-	874621	2	AO01*
	Cylinder head gasket 0,85 mm	-	-	-	-	874622	2	AO01*
13	Cylinder with piston assy., LH	-	-	-	-	981007	1	AB00*
14	Crankshaft cpl.	-	-	-	-	874607	1	AD009
15	Thrust washer	-	-	-	-	874293	1	-
16	Washer 6,25x10x1,5	-	-	-	-	GU95100116	2	-
17	Connecting rod cpl.	-	-	-	-	976006	2	AD01*
18	Connecting rod screw	-	-	-	-	849131	4	-
19	Bearing half-shell 1,535-1,540	-	-	-	RS	874243	4	AI109
	Bearing half-shell 1,539-1,544	-	-	-	BS	874244	4	AI109
20	RH chain tensioner	-	-	-	-	873689	1	AC27A
21	LH chain tensioner	-	-	-	-	873690	1	AC27B
22	Chain tension.plug	-	-	-	-	976342	2	-
23	Washer	-	-	-	-	849866	2	-
24	Hex socket screw M6x20	-	-	-	-	GU98350310	2	-

GRISO V 8V 1200 2007	GU088	00	TAB N.
TIMING SYSTEM			

47

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Timing system	-	-	-	-	976330	1	-
2	Roller cage 25x32x12	-	-	-	-	976381	1	-
3	O-ring 37,82x1,78	-	-	-	-	976488	1	-
4	Flange	-	-	-	-	976331	1	AC349
5	Hex socket screw M6X14	-	-	-	-	GU98350315	2	-
6	Ball bearing 20x47x18	-	-	-	-	976355	1	-
7	Screw M6x16	-	-	-	-	AP8152166	2	-
8	Washer	-	-	-	-	873928	1	-
9	Spacer	-	-	-	-	976334	1	-
10	Wheel speed sensor, left front	-	-	-	-	976538	1	AC379
11	Timing system gear	-	-	-	-	874281	1	AC139
12	Spring washer 19x34x1,5	-	-	-	-	GU14433400	1	-
13	Nut M18	-	-	-	-	GU92750180	1	-
14	Transmission key	-	-	-	-	GU91600450	1	AD099
15	Drive gear	-	-	-	-	874799	1	AJ079
16	Washer	-	-	-	-	976568	1	-
17	Nut M25	-	-	-	-	GU92602525	1	-
18	Drive gear	-	-	-	-	874280	1	AC139
19	Transmission key 3x6,5	-	-	-	-	GU91600365	1	AD099

	GRISO V 8V 1200 2007	GU088	00	TAB N.	48
	LUBRICATION				

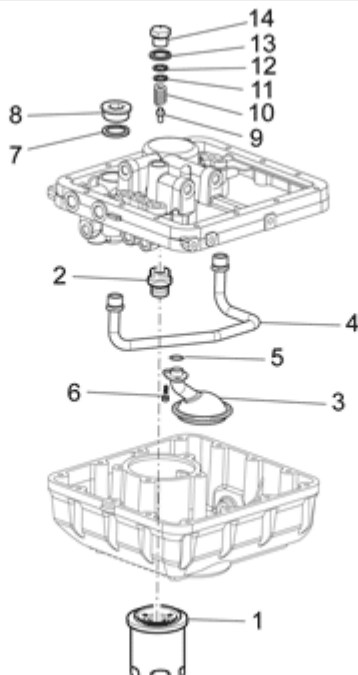


Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Pipe	-	-	-	-	874716	1	GD019
2	Gasket	-	-	-	-	GU01154230	10	-
3	Bored screw	-	-	-	-	874223	3	-
4	Nipple	-	-	-	-	874669	1	-
5	Gasket	-	-	-	-	118737	1	-
6	O-ring 12,42x1	-	-	-	-	434947	2	-
7	Oil pipe	-	-	-	-	874646	1	AJ219
8	Washer	-	-	-	-	13763	3	-
9	Intake pipe	-	-	-	-	874645	1	AJ229
10	O-ring	-	-	-	-	969323	1	-
11	Intake oil filter	-	-	-	-	874655	1	A239
12	Screw	-	-	-	-	621914	5	-
13	Reduction	-	-	-	-	GU01161331	2	-
14	Pipe	-	-	-	-	874716	1	AJ319
15	Spacer	-	-	-	-	874385	1	-
16	Pressure sensor	-	-	-	-	978854	1	AN039
17	RH Nozzle	-	-	-	-	874239	1	-
18	O-ring	-	-	-	-	874238	4	-
19	LH Nozzle	-	-	-	-	874240	1	-

GRISO V 8V 1200 2007	GU088	00	TAB N.
OIL PUMP			

49

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Oil pump assy.	-	-	-	-	874650	1	AJ059
2	Plug	-	-	-	-	GU31159050	1	AJ129
3	Washer	-	-	-	-	GU30158900	2	AJ129
4	Washer 18,25x24x1	-	-	-	-	GU18144350	1	AJ129
5	Spring	-	-	-	-	829486	1	AJ129
6	Oil pressure valve	-	-	-	-	829661	1	AJ119
7	O-ring	-	-	-	-	237553	4	AO139
8	Gasket	-	-	-	-	874482	1	AO139
9	Screw M6X45	-	-	-	-	414835	3	-
10	Pin 2x13,8	-	-	-	-	874801	1	-
11	Oil pump gear	-	-	-	-	874616	1	AJ079
12	Special washer	-	-	-	-	875119	1	-
13	Low nut	-	-	-	-	873906	1	-

		GRISO V 8V 1200 2007		GU088	00	TAB N.	50		
		OIL FILTERS							
									
Pos.	Description	Year	I_M_	Country	Version		Code	Q.ty	P.Cod.
1	Oil filter	-	-	-	-	-	GU30153000	1	AO229
2	Oil filter union	-	-	-	-	-	829122	1	-
3	Oil filter	-	-	-	-	-	GU05152230	1	AO239
4	Pipe	-	-	-	-	-	GU05005730	1	AJ219
5	O-ring 15,08x2,62viton	-	-	-	-	-	GU90706151	1	-
6	Hex socket screw M6x18	-	-	-	-	-	GU98682318	2	-
7	Copper gasket	-	-	-	-	-	GU01163700	1	AJ139
8	Plug	-	-	-	-	-	GU01163600	1	AJ139
9	Piston	-	-	-	-	-	GU30150900	1	AJ129
10	Spring	-	-	-	-	-	GU94321077	1	AJ129
11	Washer 6,15x11x0,8	-	-	-	-	-	GU95008206	2	AJ129
12	Washer	-	-	-	-	-	GU30158900	1	AJ129
13	Washer 18,25x24x1	-	-	-	-	-	GU18144350	1	AJ129
14	Plug	-	-	-	-	-	GU31159050	1	AJ129

GRISO V 8V 1200 2007

GU088

00

TAB N.

51

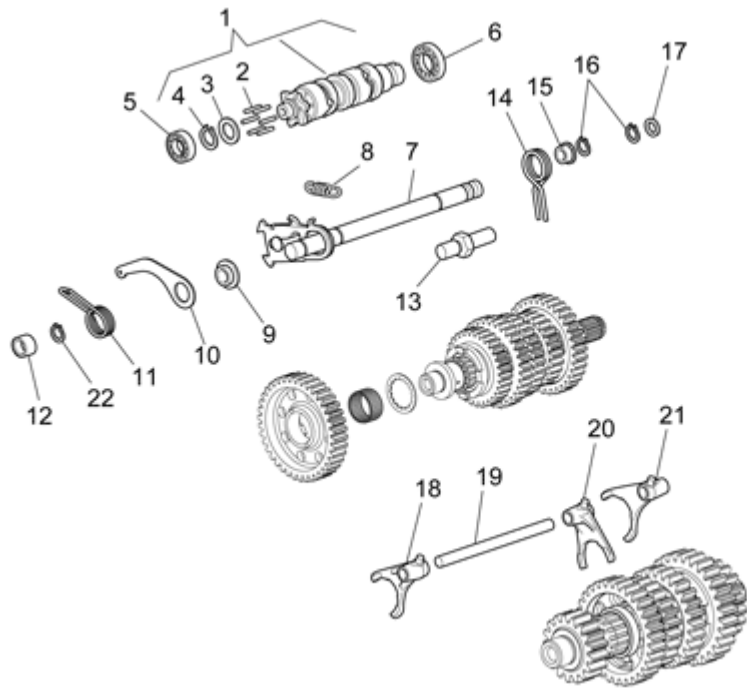
CLUTCH

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Clutch cpl.	-	-	-	-	976023	1	-
2	Clutch	-	-	-	-	976054	1	-
3	Clutch drum	-	-	-	-	976145	1	AH049
4	Hex socket screw M7x16	-	-	-	-	976535	6	-
5	Clutch disc	-	-	-	-	976053	1	-
6	Chain ring	-	-	-	-	976146	1	AK019
7	Screw	-	-	-	-	GU98230612	6	-
8	Clutch pressure plate	-	-	-	-	976361	1	-
9	Ring	-	-	-	-	976362	1	-
10	Screw w/ flange M8X25	-	-	-	-	976481	6	-
11	Conical spring washer 8,2X15	-	-	-	-	976484	6	-
12	Bush	-	-	-	-	976564	1	-
13	Rod L=mm184,5	-	-	-	2T	976594	1	AF269
	Rod L=mm186	-	-	-	3T	976595	1	AF269
	Rod L=mm187,5	-	-	-	4T	976596	1	AF269
	Rod L=mm183	-	-	-	1T	976593	1	AF269
14	Bush	-	-	-	-	GU14085900	2	-
15	Inner body	-	-	-	-	GU14086000	1	-
16	Thrust bearing	-	-	-	-	GU12087001	1	AI169
17	Clutch drive tapped	-	-	-	-	976563	1	-
18	Clutch control cylinder	-	-	-	-	976562	1	-
19	Clutch command cylinder	-	-	-	-	978739	1	BC139
20	Screw w/ flange M6x16*	-	-	-	-	AP8152278	3	-

GRISO V 8V 1200 2007	GU088	00	TAB N.
TRANSMISSION CAGE			

52

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Clutch drum nero	-	-	-	-	976453	1	AH049
2	Screw w/ flange M6x55	-	-	-	-	GU97202355	14	-
3	Plug	-	-	-	-	GU93180220	1	-
4	Hex socket screw M6X16	-	-	-	-	GU98370616	3	-
5	Gearbox black	-	-	-	-	976452	1	AH299
6	Oil plug M18x1,5	-	-	-	-	GU95980319	1	AH119
7	Washer 18,25x24x1	-	-	-	-	GU18144350	1	-
8	Breather plug	-	-	-	-	GU05204930	1	AJ329
9	Gasket 10x18x1,5	-	-	-	-	GU01528930	2	-
10	Sensor	-	-	-	-	GU19207220	1	AN029
11	Gasket 8,25x15x1	-	-	-	-	GU12154200	1	-
12	Gasket ring 14x24x7	-	-	-	-	GU90401424	1	AO169
13	Oil unload plug M10X1	-	-	-	-	GU31003766	1	AH109
14	Bush 6,6x9x13	-	-	-	-	GU19002020	2	-
15	Hose clamp D10,1*	-	-	-	-	AP8101595	1	-
16	Fuel pipe 5,5x10	-	-	-	-	AP8120952	1	-
17	Gear box assy	-	-	-	-	976934	1	AG099

		GRISO V 8V 1200 2007		GU088		00		TAB N.		53
GEAR BOX SELECTOR										
										
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.		
1	Shift cam cpl.	-	-	-	-	GU05234431	1	AG039		
2	Pin	-	-	-	-	GU05234631	6	-		
3	Spacer	-	-	-	-	GU05235531	1	-		
4	Circlip	-	-	-	-	GU90271022	1	-		
5	Ball bearing 17x35x10	-	-	-	-	GU92201117	1	AI139		
6	Ball bearing 25x42x9	-	-	-	-	GU92201025	1	AI139		
7	Preselection complete	-	-	-	-	GU05236231	1	AG119		
8	Spring	-	-	-	-	GU05238231	1	AG139		
9	Bush	-	-	-	-	GU05238431	1	-		
10	Lever Index	-	-	-	-	GU05234731	1	AG129		
11	Spring	-	-	-	-	GU05234130	1	AG139		
12	Spacer	-	-	-	-	GU05234230	1	-		
13	Fixing pin	-	-	-	-	GU05234931	1	-		
14	Spring	-	-	-	-	GU05238331	1	AG109		
15	Spacer	-	-	-	-	GU05238131	1	-		
16	Circlip	-	-	-	-	GU90271014	2	-		
17	Fifth wheel	-	-	-	-	GU05239330	1	-		
18	Fork 1a-3a	-	-	-	-	GU05230531	1	AG059		
19	Fork shaft	-	-	-	-	GU05232431	1	AG069		
20	Fork 5a-6a	-	-	-	-	GU05232631	1	AG059		
21	Fork 2a-4a	-	-	-	-	GU05230831	1	AG059		
22	Circlip	-	-	-	-	GU90353014	1	-		



GRISO V 8V 1200 2007

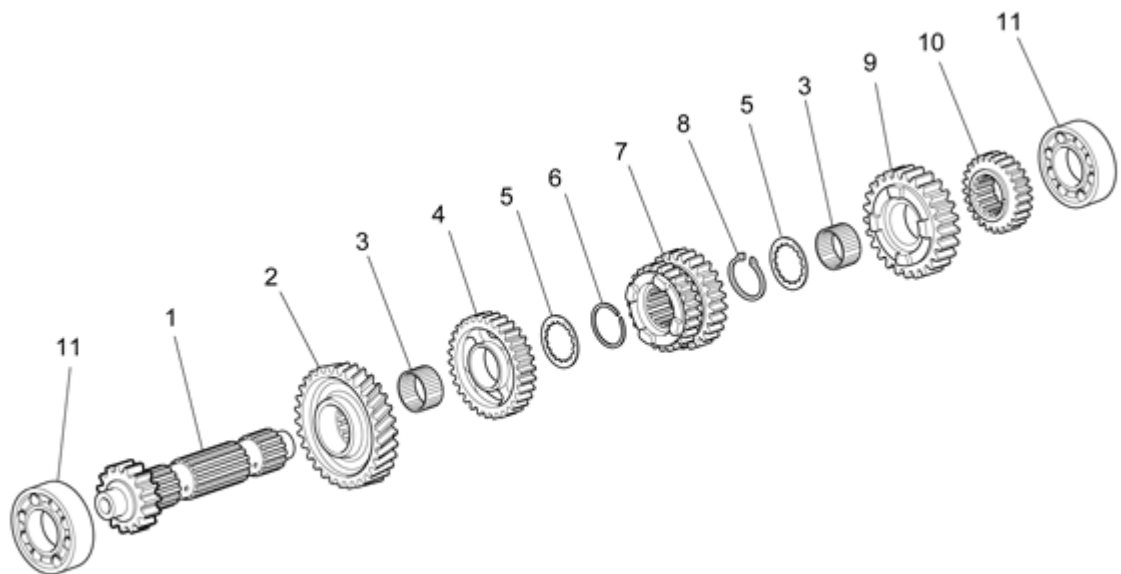
GU088

00

TAB N.

54

PRIMARY GEAR SHAFT



Pos.	Description	Year	I_M_	Country	Version		Code	Q.ty	P.Cod.
1	Primary gear shaft Z=17	-	-	-	-	-	GU05210631	1	AG00X
2	Drive gears Z=35	-	-	-	-	-	GU05215631	1	AG019
3	Roller cage 26x30x15,6	-	-	-	-	-	GU92252029	2	AI119
4	Gear 5a Z=31	-	-	-	-	-	GU05212031	1	AG045
5	Clearance washer	-	-	-	-	-	GU05214630	2	-
6	Snap ring 30x1,2SW	-	-	-	-	-	GU90271230	1	-
7	Gear 3a-4a Z=23-26	-	-	-	-	-	GU05211431	1	AG043
8	Snap ring 30x27,9	-	-	-	-	-	GU90271030	1	-
9	Gear 6a Z=29	-	-	-	-	-	GU05212631	1	AG046
10	Gear 2a Z=20	-	-	-	-	-	GU05211331	1	AG042
11	Ball bearing 20x52x15	-	-	-	-	-	GU92201822	2	AI059



GRISO V 8V 1200 2007

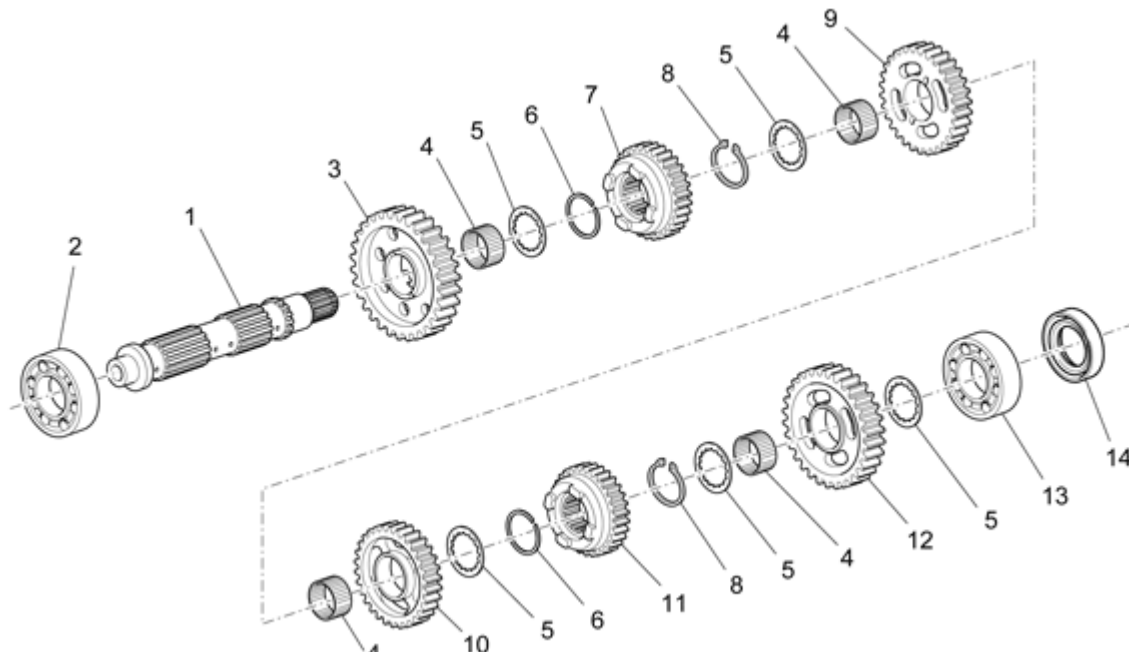
GU088

00

TAB N.

55

DRIVEN SHAFT



Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Driven shaft	-	-	-	-	GU05213631	1	AG00Y
2	Ball bearing 20x52x15	-	-	-	-	GU92201822	1	AI069
3	Gear 1a Z=38	-	-	-	-	GU05214231	1	AG041
4	Roller cage 26x30x15,6	-	-	-	-	GU92252029	4	AI119
5	Clearance washer	-	-	-	-	GU05214630	5	-
6	Snap ring 30x1,2SW	-	-	-	-	GU90271230	2	-
7	Gear 5a Z=30	-	-	-	-	GU05214031	1	AG045
8	Snap ring 30x27,9	-	-	-	-	GU90271030	2	-
9	Gear 3a Z=31	-	-	-	-	GU05214731	1	AG043
10	Gear 4a Z=29	-	-	-	-	GU05215031	1	AG044
11	Gear 6a Z=25	-	-	-	-	GU05220531	1	AG046
12	Gear 2a Z=34	-	-	-	-	GU05214431	1	AG042
13	Ball bearing 25x52x15	-	-	-	-	GU92201226	1	AI069
14	Gasket ring 25X40X7	-	-	-	-	GU90412541	1	AO169

GRISO V 8V 1200 2007	GU088	00	TAB N.
CLUTCH SHAFT			

56

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Clutch shaft Z=24	-	-	-	-	976351	1	AG259
2	Ball bearing 25x52x15	-	-	-	-	GU92201226	1	AI209
3	Gasket ring 25x47x7	-	-	-	-	976533	1	AO199
4	Thrust bearing	-	-	-	-	976532	1	AI169
5	Roller bearing 20x28x13	-	-	-	-	GU92232028	1	AI209

GRISO V 8V 1200 2007

GU088

00

TAB N.

57

CURRENT GENERATOR

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Generator	-	-	-	-	GU05712431	1	AM129
2	Spacer 8,5x17x13	-	-	-	-	GU91180823	1	-
3	Hex socket screw M8X45	-	-	-	-	GU98620445	1	-
4	Hex socket screw M10x60	-	-	-	-	GU98620560	1	-
5	Nut M10X1,5	-	-	-	-	GU92660012	1	-
6	Belt	-	-	-	-	GU05702530	1	AM159
7	Generator lever pulley	-	-	-	-	GU05701430	1	AM149
8	Nut M16	-	-	-	-	GU92606516	1	-
9	Washer 16,25x24,5x5	-	-	-	-	GU30714201	1	-
10	Flywheel magneto key	-	-	-	-	GU4FAN000030	1	AD089
11	Hex socket screw M8x50	-	-	-	-	GU98230850	1	-
12	Nut M8x1,25	-	-	-	-	GU92605408	1	-



GRISO V 8V 1200 2007

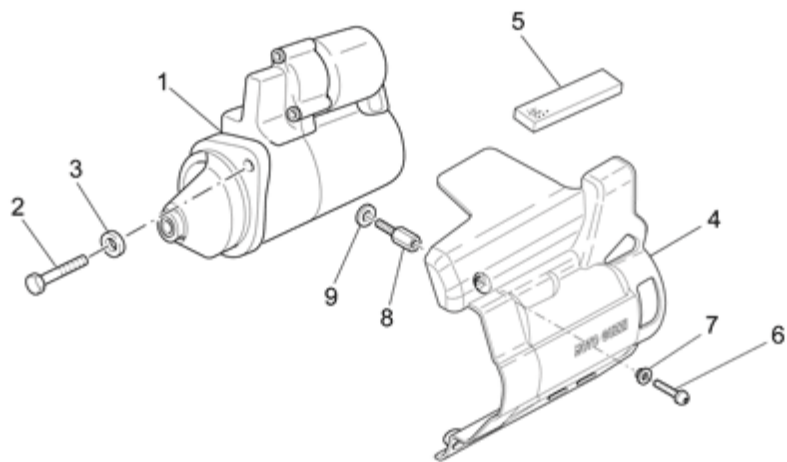
GU088

00

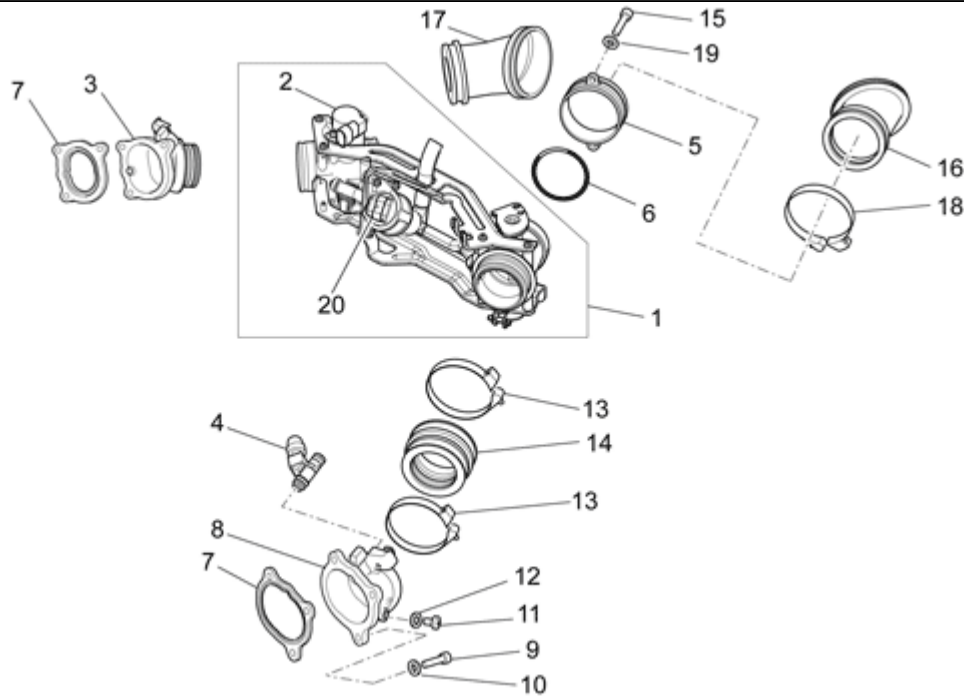
TAB N.

58

STARTER MOTOR



Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Starter motor Bosch	-	-	-	-	GU05730730	1	AK009
2	Screw	-	-	-	-	GU98082470	2	-
3	Washer 8,4x15	-	-	-	-	GU03270300	2	-
4	Cover chrime grey	-	-	-	-	GU05733330	1	AH099
5	Adhesive sponge	-	-	-	-	AP8117200	1	-
6	Hex socket screw M6x10	-	-	-	-	GU98370609	2	-
7	Bush	-	-	-	-	AP8121032	2	-
8	Stud bolt	-	-	-	-	GU03469201	1	-
9	Washer 6,4x12	-	-	-	-	GU03013800	1	-

		GRISO V 8V 1200 2007		GU088		00		TAB N.		59
THROTTLE BODY										
										
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.		
1	Throttle assy	-	-	-	-	873904	1	EC***		
2	Potentiometer	-	-	-	-	981010	1	EC059		
3	RH manifold	-	-	-	-	873490	1	AC00A		
4	Injector kit complete	-	-	-	-	976555	2	EC129		
5	Flange	-	-	-	-	976498	2	-		
6	O-ring 56,87x1,78	-	-	-	-	976534	2	-		
7	Gasket	-	-	-	-	873879	2	AO04*		
8	LH manifold	-	-	-	-	873491	1	AC00B		
9	Hex socket screw M6X25	-	-	-	-	GU98370625	6	AC369		
10	Washer 6,15x11x0,8	-	-	-	-	GU95008206	6	-		
11	Hex socket screw M6x20	-	-	-	-	GU98350310	2	-		
12	Washer 6,25x10x1,5	-	-	-	-	GU95100116	2	-		
13	Hose clamp 61/65,5	-	-	-	-	GU93305061	4	AC029		
14	Hose	-	-	-	-	873861	2	AC04*		
15	Hex socket screw M5x12	-	-	-	-	GU98682212	2	-		
16	Intake hose RH	-	-	-	-	976494	1	EB04V		
17	Intake hose LH	-	-	-	-	976495	1	EB04W		
18	Min.regulation engine	-	-	-	-	981011	1	-		
	Hose clamp 62/82 mm	-	-	-	-	GU12548201	2	CE509		
19	Washer 5,3X10X1	-	-	-	-	GU95008305	2	AC029		

GRISO V 8V 1200 2007

GU088

00

TAB N.

60

SPECIFIC TOOLS I

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Belt tensioning tool	-	-	-	-	GU06948600	1	-
2	Front cover installation cone	-	-	-	-	GU05911730	1	-
3	Gearbox opening tool	-	-	-	-	GU05912530	1	-
4	Connecting rod stopper	-	-	-	-	020716Y	1	-
5	Circlip w.bent end tool	-	-	-	-	020717Y	1	-
6	Timing cover seal drift	-	-	-	-	GU05927230	1	-
7	Wrench remov.cover sump/filter	-	-	-	-	GU01929100	1	-
8	Flange flywheel side	-	-	-	-	GU12912000	1	-
9	Seal ring onto flange fly.side	-	-	-	-	GU14927100	1	-
10	Lock flywh.starter motor gear	-	-	-	-	GU12911801	1	-
11	Bow for valve assy&disassy	-	-	-	-	AP8140179	1	-
12	Separator guard A/Extractor MG	-	-	-	-	AP8106698	1	-
13	Gearbox housing support	-	-	-	-	GU05902530	1	-
14	Index plate tim.sett./ign.cont	-	-	-	-	GU19929600	1	-
15	Arrow tim.set.ignition control	-	-	-	-	GU17947560	1	-
16	Index plate hub	-	-	-	-	981006	1	-
17	Flange removal flywheel side	-	-	-	-	GU12913600	1	-
18	Seal ring flange flywheel side	-	-	-	-	GU19927100	1	-



GRISO V 8V 1200 2007

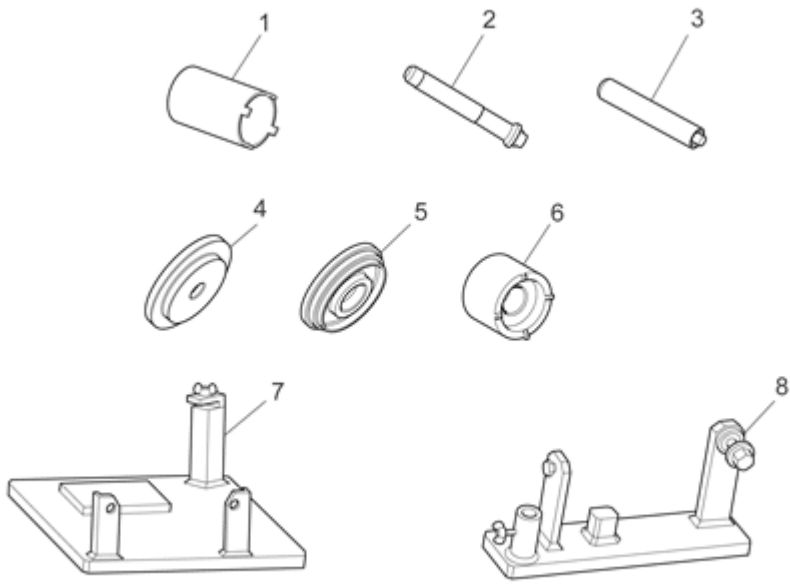
GU088

00

TAB N.

61

SPECIFIC TOOLS II



Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Steering lock tool	-	-	-	-	AP814190	1	-
2	Handle for drifts	-	-	-	-	GU05902732	1	-
3	Ball joint seal drift	-	-	-	-	GU05902733	1	-
4	Transmis.box oil seal drift 85	-	-	-	-	GU05902731	1	-
5	Sprocket oil seal drift 45x58	-	-	-	-	GU05902735	1	-
6	Wrench for sprocket ring nut	-	-	-	-	GU05902734	1	-
7	Transmission box support	-	-	-	-	GU05902730	1	-
8	Bevel gears support	-	-	-	-	GU05902736	1	-

GRISO V 8V 1200 2007

GU088

00

TAB N.

62

SPECIFIC TOOLS III

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Tool oil seal assy Ø41 mm	-	-	-	-	AP8140145	1	-
2	Weight for AP8140189	-	-	-	-	AP8140146	1	-
3	Tool for spacer stop	-	-	-	-	AP8140147	1	-
4	Separator plate for spacer	-	-	-	-	AP8140148	1	-
5	Protection for disassembly op	-	-	-	-	AP8140149	1	-
6	Tool to assist bleeding air	-	-	-	-	AP8140150	1	-
7	SHOWA FORKS TOOL KIT	-	-	-	-	AP8140151	1	-