


NORGE 1200

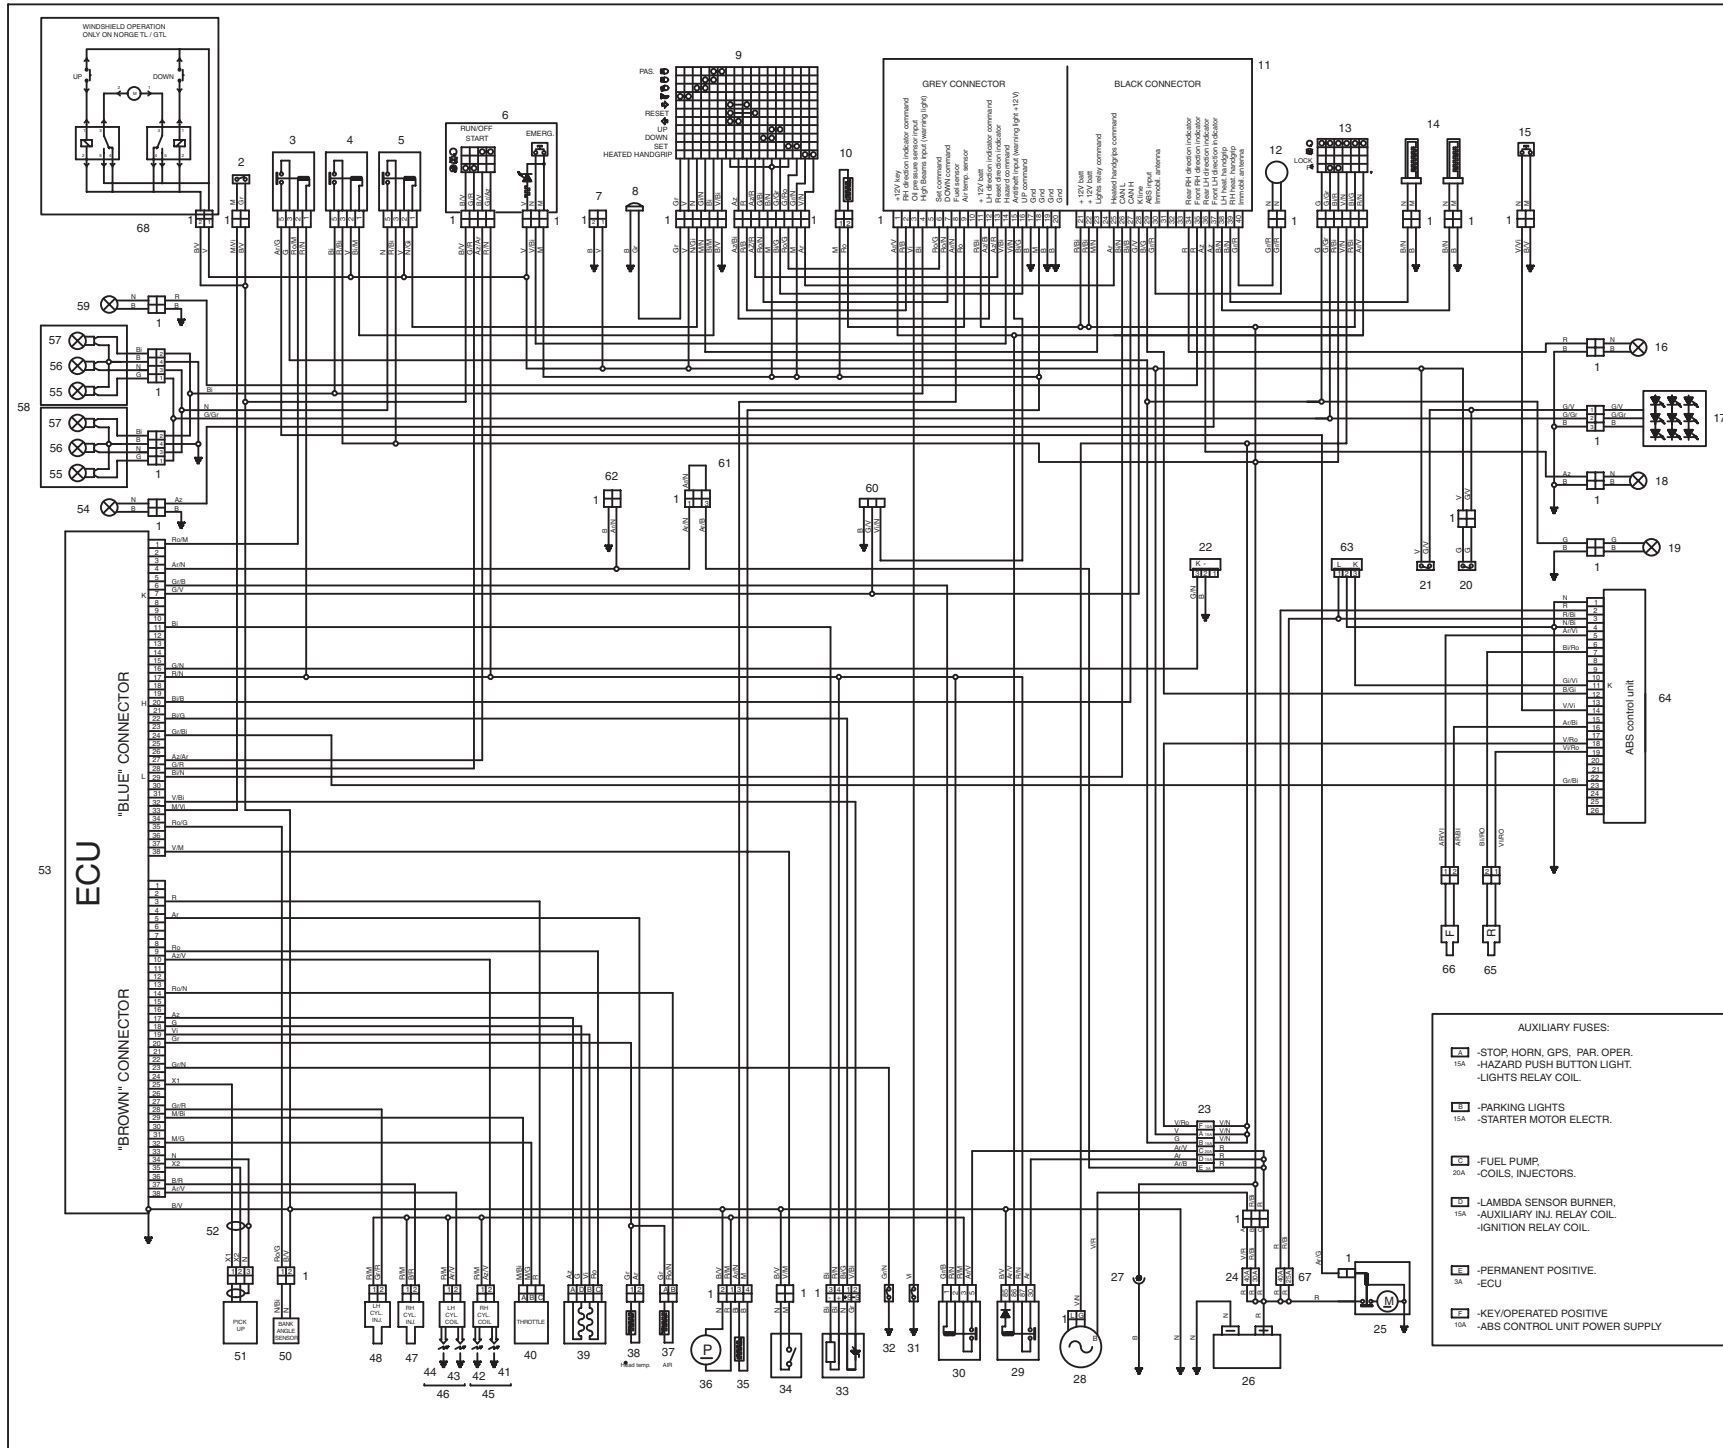

- 1 MULTIPLE CONNECTORS
- 2 CLUTCH SWITCH
- 3 IGNITION RELAY
- 4 HIGH BEAMS RELAY
- 5 LOW BEAMS RELAY
- 6 RH DIP SWITCH (RUN/OFF/START/HAZARD)
- 7 NAVIGATOR CONNECTOR
- 8 HORN
- 9 LH DIP SWITCH
- 10 INSTRUMENT PANEL AIR TEMP. THERMISTOR
- 11 INSTRUMENT PANEL
- 12 IMMOBILIZER ANTENNA
- 13 IGNITION SWITCH
- 14 HEATED HANDGRIPS
- 15 ABS SWITCH
- 16 RH REAR DIRECTION INDICATOR
- 17 TAIL LIGHT (LED)
- 18 LH REAR DIRECTION INDICATOR
- 19 NUMBER PLATE LIGHT
- 20 REAR STOP SWITCH
- 21 FRONT STOP SWITCH
- 22 ECU DIAGNOSIS CONNECTOR
- 23 AUXILIARY FUSES
- 24 MAIN FUSES
- 25 STARTER MOTOR
- 26 BATTERY
- 27 POWER OUTLET
- 28 GENERATOR
- 29 MAIN INJECTION RELAY
- 30 AUXILIARY INJECTION RELAY
- 31 OIL PRESSURE GAUGE
- 32 NEUTRAL SWITCH
- 33 LAMBDA SENSOR
- 34 SIDE STAND SWITCH
- 35 FUEL LEVEL SENSOR
- 36 FUEL PUMP
- 37 INTAKE AIR TEMP. THERMISTOR
- 38 HEAD TEMP. THERMISTOR
- 39 AUTOMATIC AIR
- 40 THROTTLE SENSOR
- 41 RH CYL. INNER SPARK PLUG
- 42 RH CYL. OUTER SPARK PLUG
- 43 LH CYL. INNER SPARK PLUG
- 44 LH CYL. OUTER SPARK PLUG
- 45 RH CYLINDER TWIN COIL
- 46 LH CYLINDER TWIN COIL
- 47 RH CYL. INJECTOR
- 48 LH CYL. INJECTOR
- 49 xx
- 50 BANK ANGLE SENSOR
- 51 PICKUP SENSOR
- 52 PICKUP CABLE SHIELD
- 53 ECU
- 54 LH FRONT DIRECTION INDICATOR
- 55 PARKING LIGHT BULB (2)
- 56 LOW BEAM BULB
- 57 HIGH BEAM BULB (2)
- 58 HEADLIGHT (2)
- 59 RH FRONT DIRECTION INDICATOR
- 60 INSTRUMENT PANEL DIAG.
- 61 DIODE PRE-SETTING
- 62 CONDENSER PRE-SETTING
- 63 ABS DIAG.
- 64 ABS CONTROL UNIT
- 65 REAR WHEEL SPEED SENSOR
- 66 FRONT WHEEL SPEED SENSOR
- 67 ABS FUSES
- 68 OPERATION

- CABLE COLOURS**
- | | |
|---------------|-----------|
| Ar ORANGE | M BROWN |
| Az LIGHT BLUE | N BLACK |
| B BLUE | R RED |
| Bi WHITE | V GREEN |
| G YELLOW | Vl VIOLET |
| Gr GREY | Ro PINK |

AUXILIARY FUSES:

- 15A** -STOP HORN, GPS, PAR. OPER. -HAZARD PUSH BUTTON LIGHT. -LIGHTS RELAY COIL.
- 15A** -PARKING LIGHTS -STARTER MOTOR ELECTR.
- 20A** -FUEL PUMP, -COILS, INJECTORS.
- 15A** -LAMBDA SENSOR BURNER, -AUXILIARY INJ. RELAY COIL. -IGNITION RELAY COIL.
- 3A** -PERMANENT POSITIVE. -ECU
- 10A** -KEY-OPERATED POSITIVE -ABS CONTROL UNIT POWER SUPPLY